TECHNICAL CATALOGUE OF ASF SLIDING SYSTEM WITHOUT/WITH THRESHOLD (8 and 10 mm)

Asaf Alüminyum

1.ASF SLIDING SYSTEM OVERVIEW

SLIDING SYSTEM WITH THRESHOLD

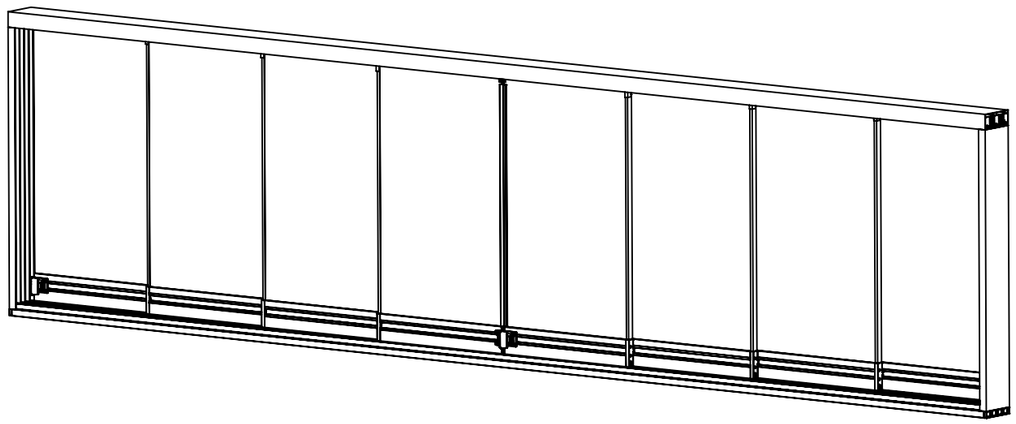

SLIDING SYSTEM WITHOUT THRESHOLD

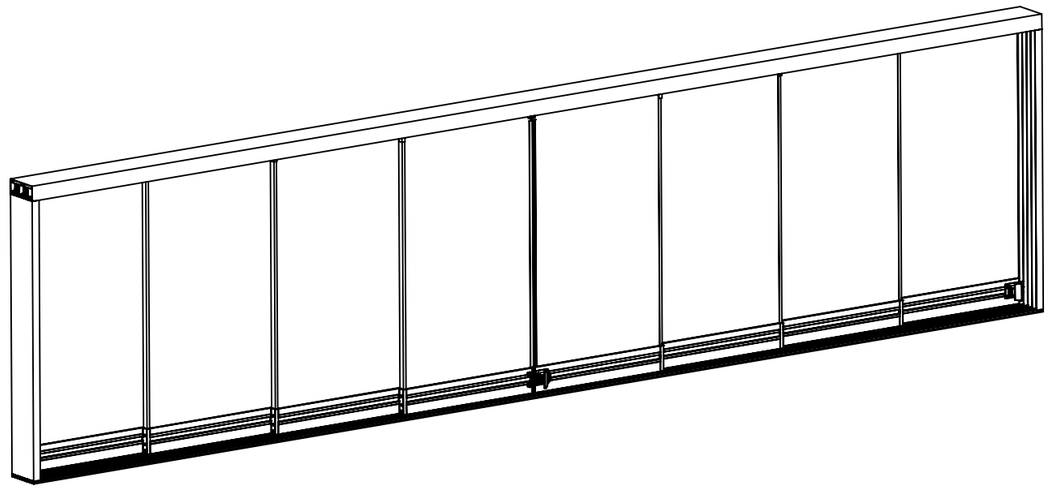

GENERAL INFORMATION:

- THE SLIDING SYSTEM DOESN'T HAVE LIMIT OF GLASS PANELS. FOR SYSTEMS LONGER THEN 6 METER NUMBER OF PANELS CAN BE INCREASED BY THE ADDITION OF THE LOWER AND UPPER FRAME PROFILE.

- MAXIMUM GLASS PANELS WIDTH : 1300 MM
- RECOMMENDED GLASS PANELS WIDTH : 1000 MM
- PANELS HEIGHT FOR 10 MM GLASS : 3000 MM
- PANELS HEIGHT FOR 8 MM GLASS : 3000 MM

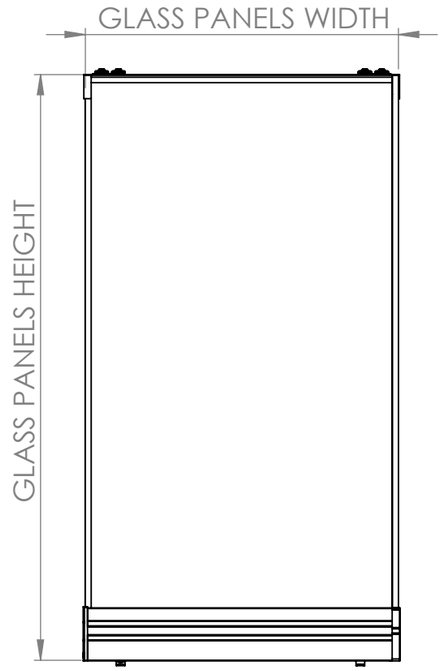

TECHNICAL CATALOGUE OF ASF SLIDING SYSTEM WITHOUT/WITH THRESHOLD (8 and 10 mm)

Asaf Alüminyum

ASF SLIDING SYSTEM WITH THRESHOLD VIEW

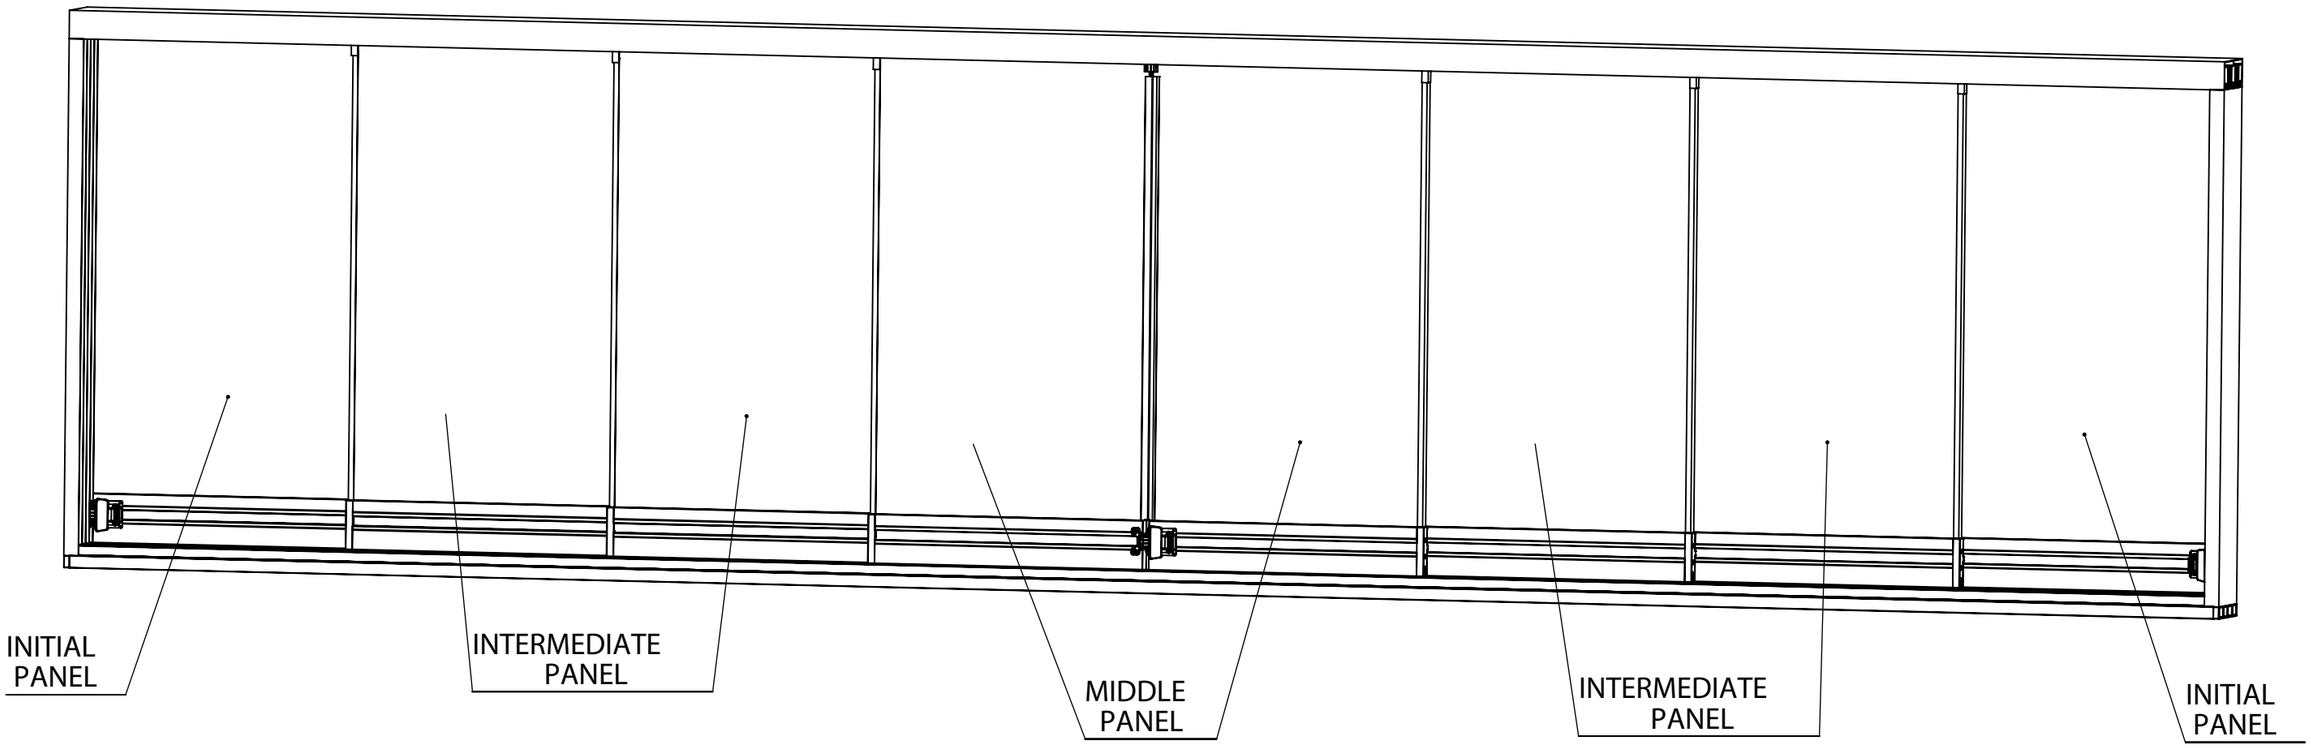

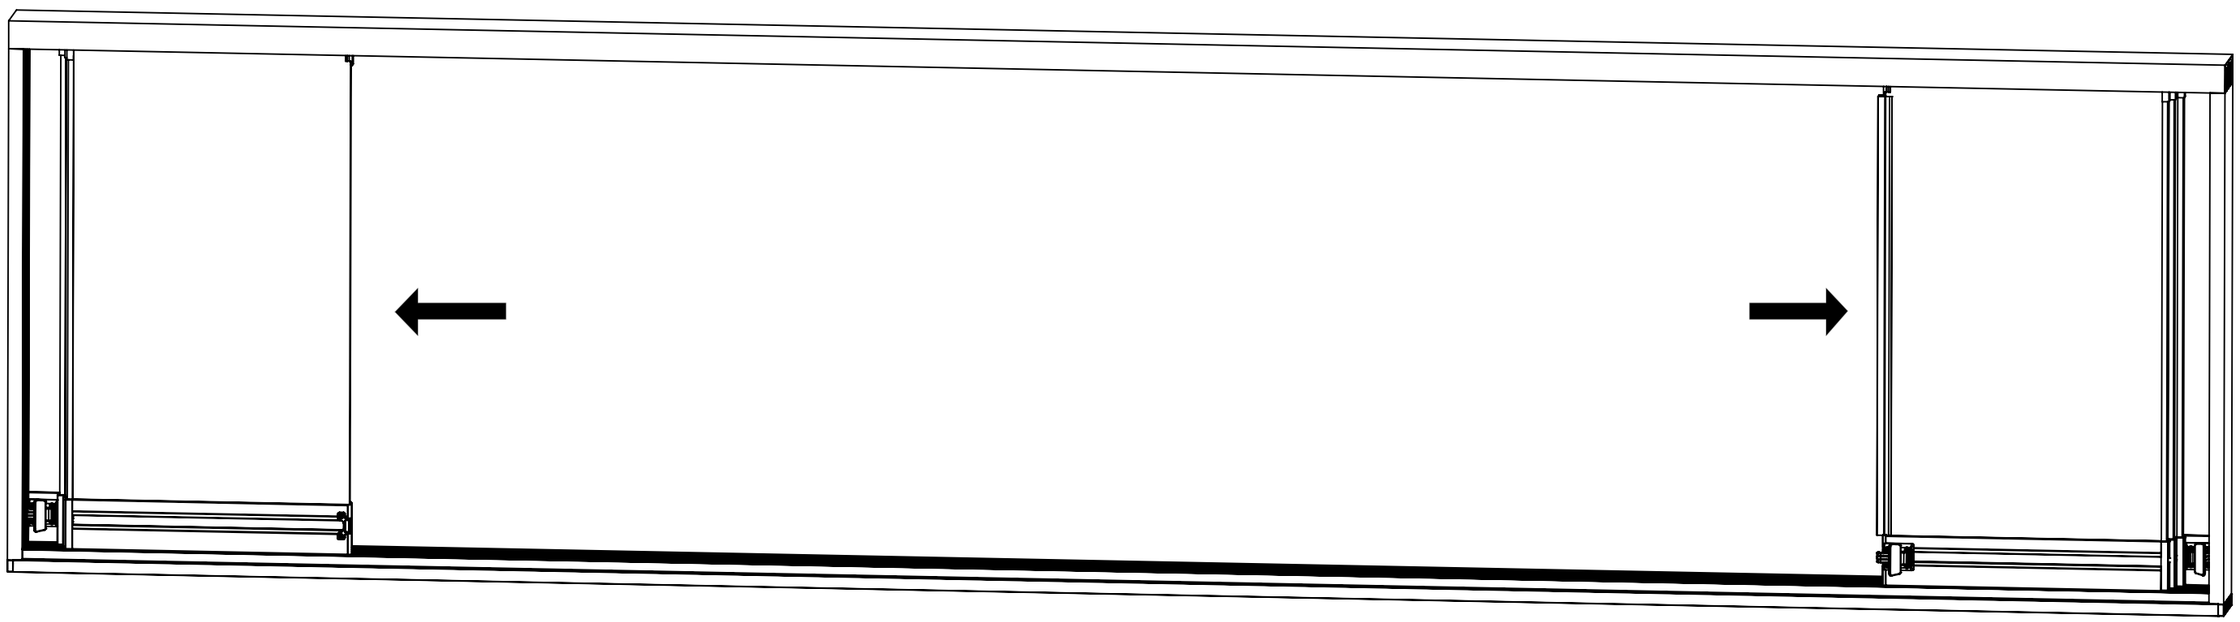

TECHNICAL CATALOGUE OF ASF SLIDING SYSTEM WITHOUT/WITH THRESHOLD (8 and 10 mm)

Asaf Alüminyum

ASF SLIDING SYSTEM WITHOUT THRESHOLD VIEW

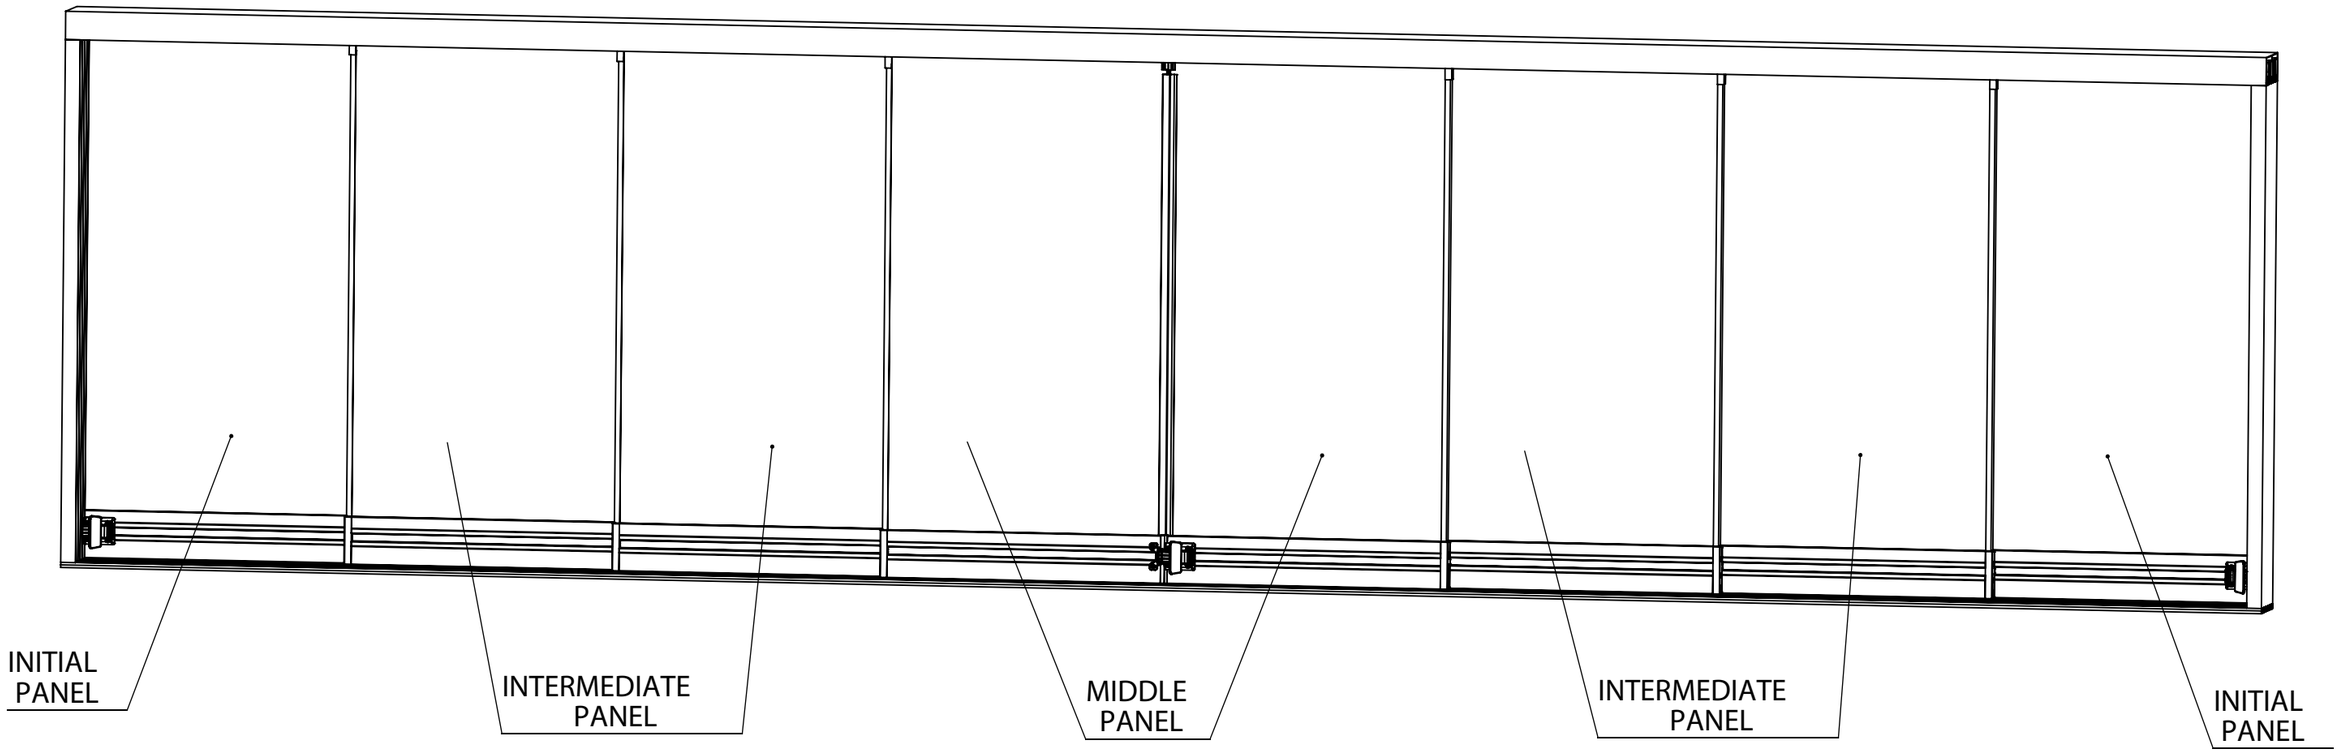

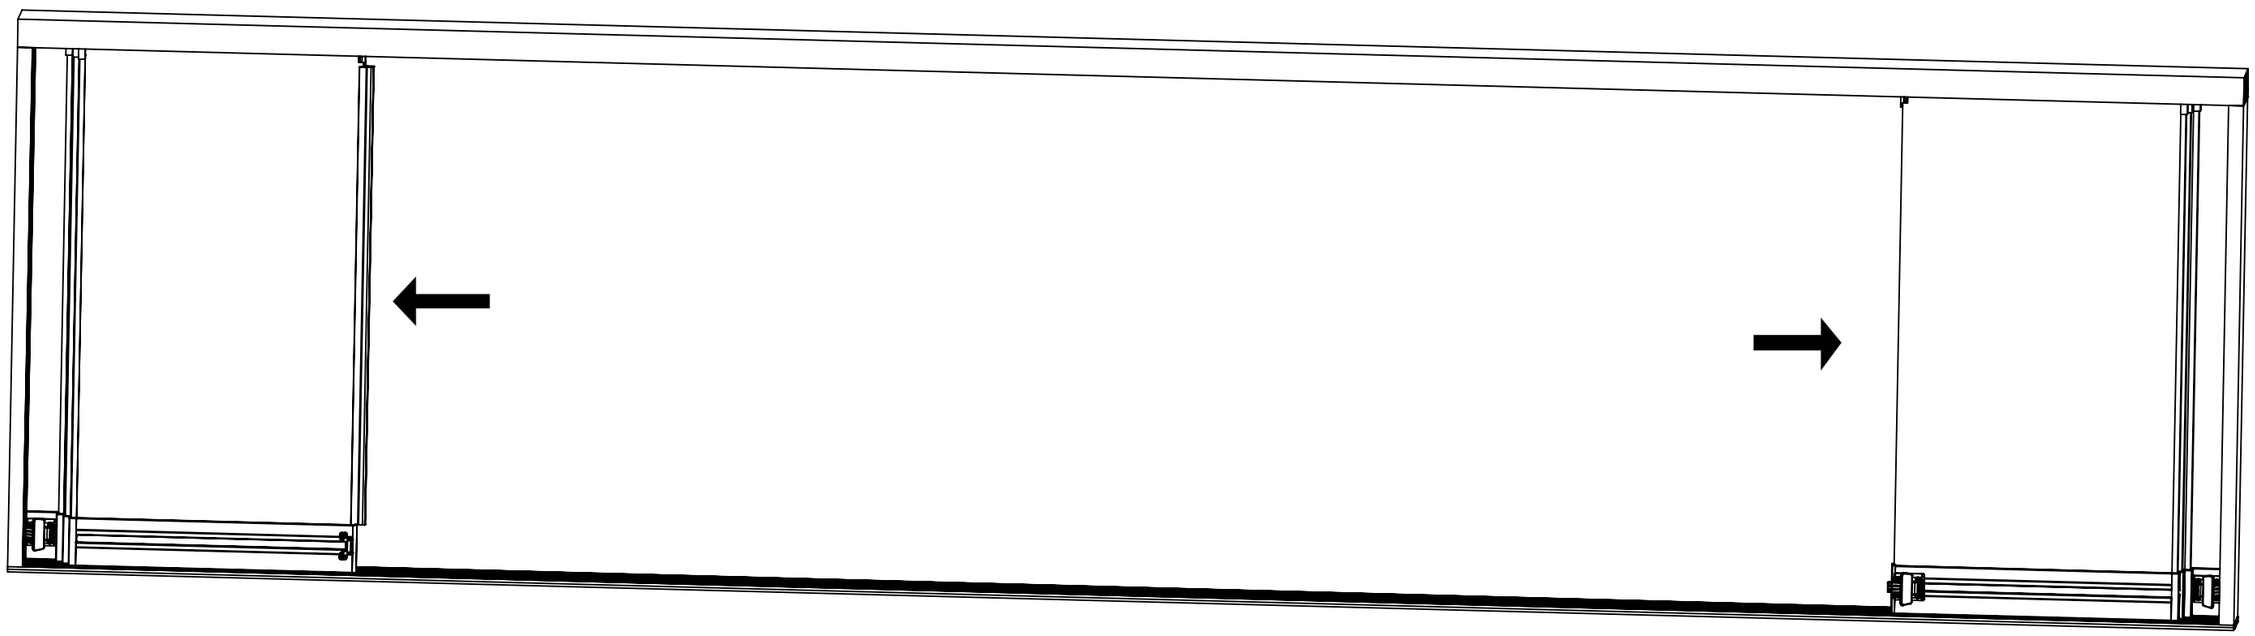

TECHNICAL CATALOGUE OF ASF SLIDING SYSTEM WITHOUT/WITH THRESHOLD (8 and 10 mm)

Asaf Alüminyum

2. ASF SLIDING SYSTEM MANAGEMENT OF TAKING MEASURE

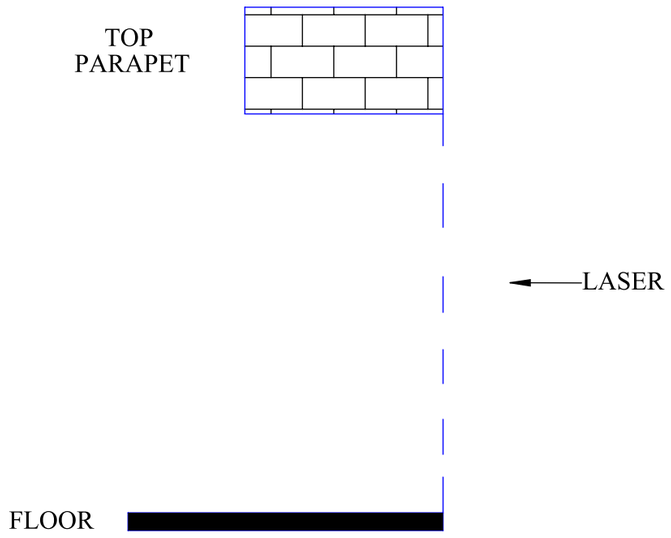

1. UPPER AND LOWER PARAPET ARE DEFINED USING CONSTRUCTION LASERS.
2. MEASUREMENT SHOULD BE TAKEN WITH SAME LEVEL OF THE UPPER PARAPET OUTER EDGE.
3. BOTTOM FRAME SHOULD BE MEASURED USING LASER REFER TO THE TOP OF THE PARAPET.

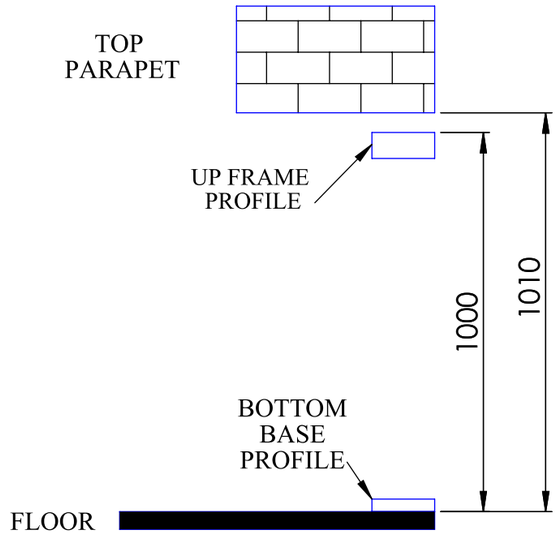

OPERATIONAL DEDUCTIBLE GAP IS 10 mm.

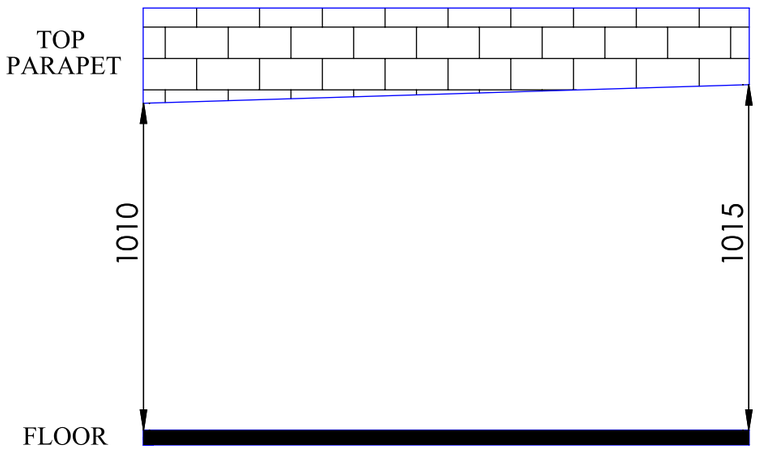

THE SYSTEM HEIGHT MUST BE TAKEN FROM THE TOP OF THE LOWEST POINT

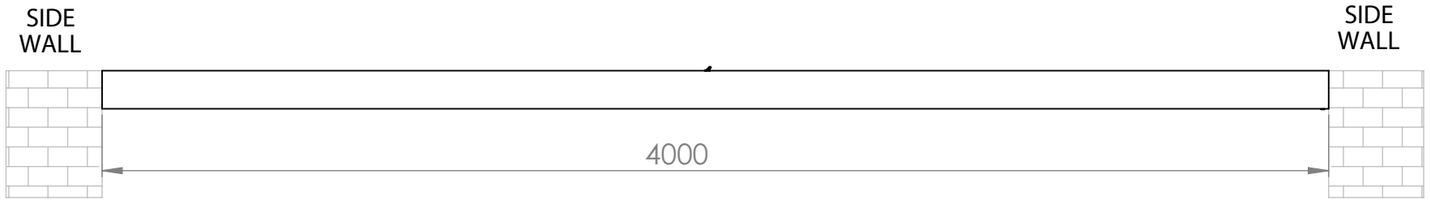

NECESSARY DATA FOR THE ASF SLIDING SYSTEM :

1. LENGHT
2. HEIGHT
3. NUMBER OF PANELS
4. PROFILE COLOR
5. GLASS COLOR

3. ASF SLIDING SYSTEM WITHOUT THRESHOLD CALCULATION

3.1. GLASS CALCULATION GUIDE:

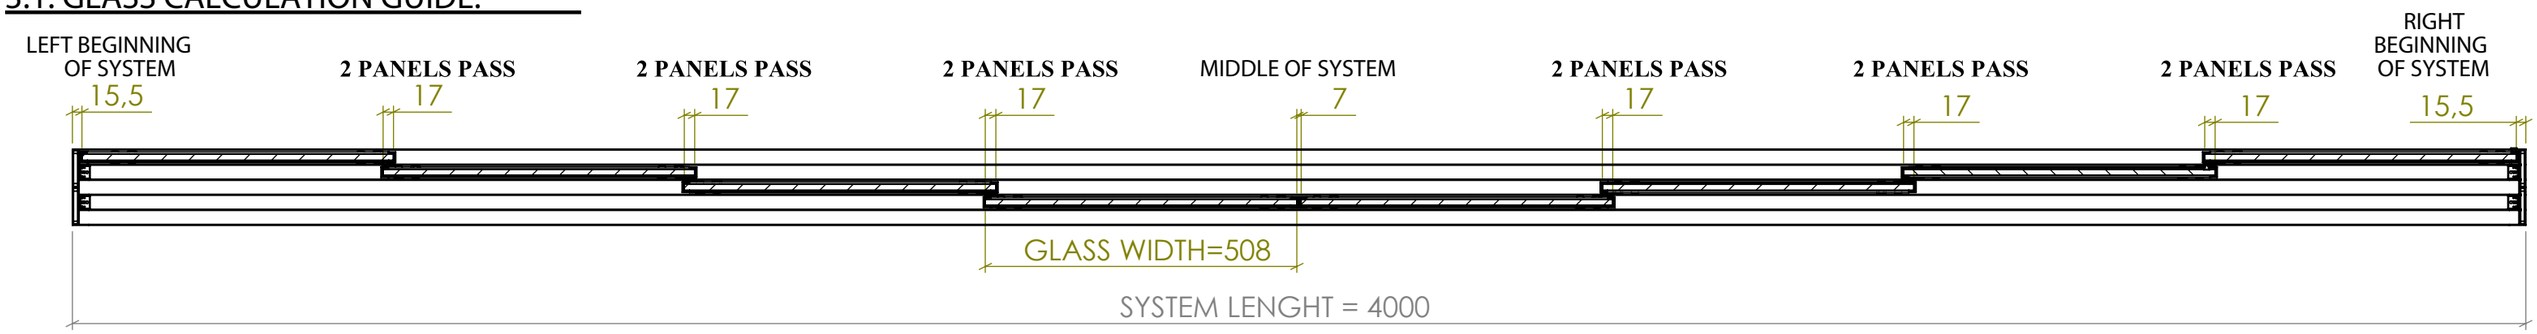

GLASS WIDTH CALCULATION TABLE	
FOR THE RIGHT AND LEFT BEGINNING OF SYSTEM	15.5 MM
FOR THE CENTER OF SYSTEM	7 MM
FOR THE PANELS PASS	17 MM

EXAMPLE OF CALCULATION:

FORMULA: GLASS WIDTH CALCULATION

SYSTEM LENGHT **4000 MM** − LEFT BEGINNING OF SYSTEM **15.5 MM** − RIGHT BEGINNING OF SYSTEM **15.5 MM** − CENTER OF SYSTEM **7 MM** + INTERSECTING **PANEL * 17 COUNT** **6 x 17 102 MM** / PANEL NUMBER **8** = ONE GLASS DIMENSION **508 MM**

FORMULA: GLASS HEIGHT CALCULATION

SYSTEM HEIGHT **1000 MM** − LOWER FRAME PROFILE HEIGHT **9 MM** − DISTANCE BETWEEN LOWER FRAME PROF. AND LOWER BASE PROF. **6 MM** − DISTANCE BETWEEN GLASS AND **68.5 MM** − DISTANCE BETWEEN GLASS AND BEGINNING OF UPPER BASE PROFILE **7.5 MM** − DISTANCE BETWEEN BEGINNING OF UPPER BASE PROFILE AND BEGINNING OF UPPER FRAME PROFILE **34 MM** = GLASS HEIGHT **875 MM**

SYSTEM HEIGHT **1000 MM** − **125 MM** = GLASS HEIGHT **875 MM**

GLASS DIMENSION →

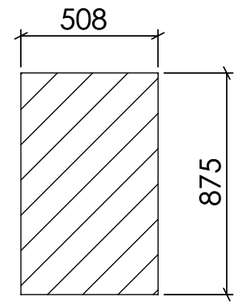

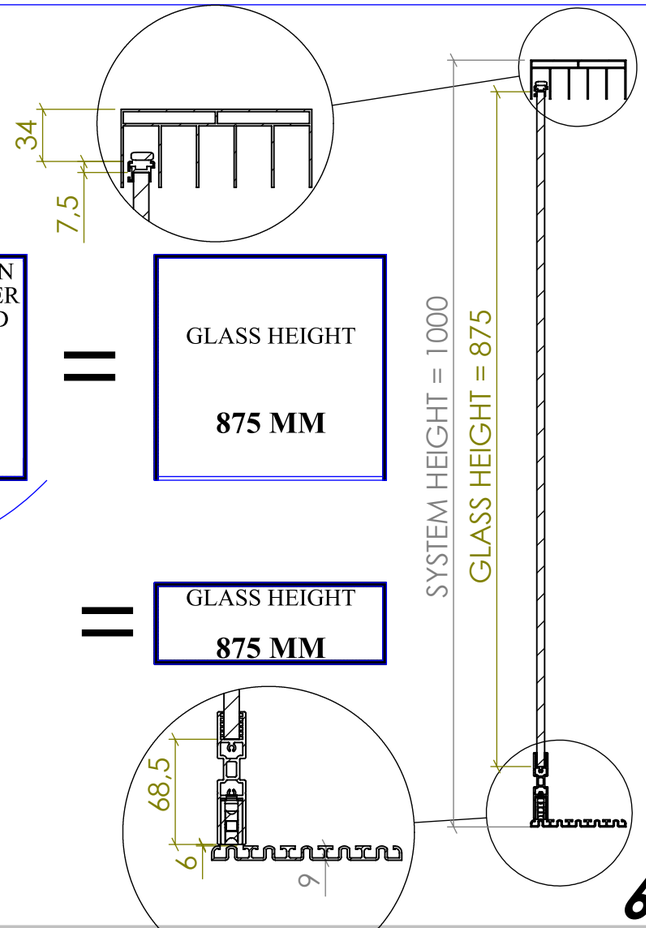

Asaf Alüminyum

3.2.BASE PROFILE CALCULATION METHOD

3.2.1.UPPER BASE PROFILE CALCULATION

FORMULA: UPPER BASE PROFILE LENGTH CALCULATION

GLASS WIDTH		INNER SPACE OF THE BAR **CONJOINING** CAP		INNER SPACE OF THE BAR **CONJOINING** CAP		UPPER BASE PROFILE LENGTH
508 MM	−	**8,5 MM**	−	**8,5 MM**	=	**491 MM**

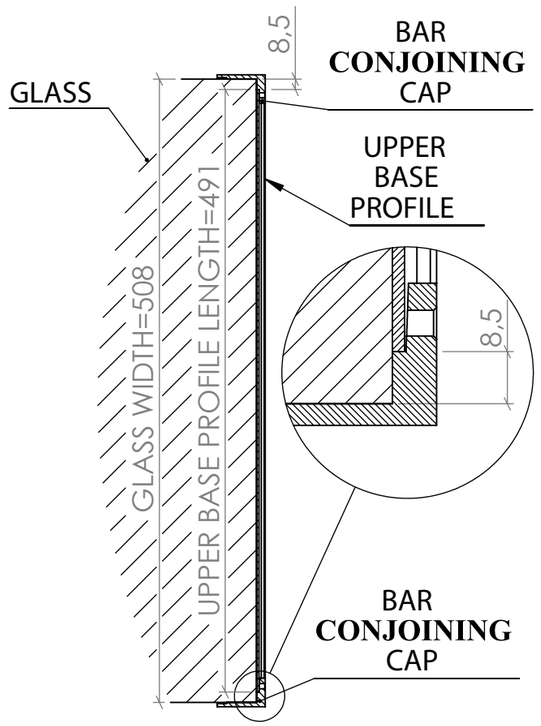

3.2.2.LOWER BASE PROFILE CALCULATION

1.FOR THE INITIAL AND MIDDLE PANELS;

FORMULA: LOWER BASE PROFILE LENGTH CALCULATION

GLASS WIDTH		INNER SPACE OF THE MIDDLE AND SIDE COLUMN CAPS		INNER SPACE OF THE INTERMEDIATE BASE CAPS		LOWER BASE PROFILE LENGHT
508 MM	−	**8,5 MM**	−	**2,5 MM**	=	**497 MM**

2.FOR THE INTERMEDIATE PANELS;

FORMULA: LOWER BASE PROFILE LENGTH CALCULATION

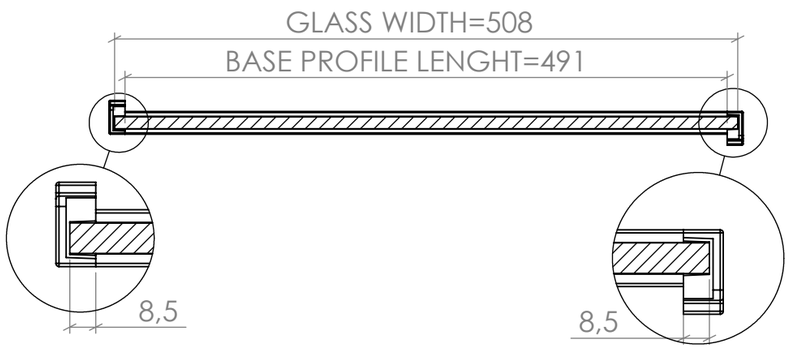

GLASS WIDTH		INNER SPACE OF THE INTERMEDIATE BASE CAPS		INNER SPACE OF THE INTERMEDIATE BASE CAPS		LOWER BASE PROFILE LENGHT
508 MM	−	**8,5 MM**	−	**8,5 MM**	=	**491 MM**

Asaf Alüminyum

3.3.GLASS SEAL CALCULATION GUIDE

3.3.1. LENGTH CALCULATION OF INITIAL GLASS SEAL

FORMULA: INITIAL ALUM. SEAL LENGTH CALCULATION

GLASS HEIGHT	−	GLASS GAP DIMENTION INTO BASE PROFILE	−	GLASS GAP DIMENTION INTO BAR CONJOINING CAP	=	INITIAL ALUM. SEAL LENGTH
875 MM		18 MM		24.5 MM		832.5 MM

INITIAL ALUMINUM GLASS SEAL

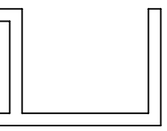

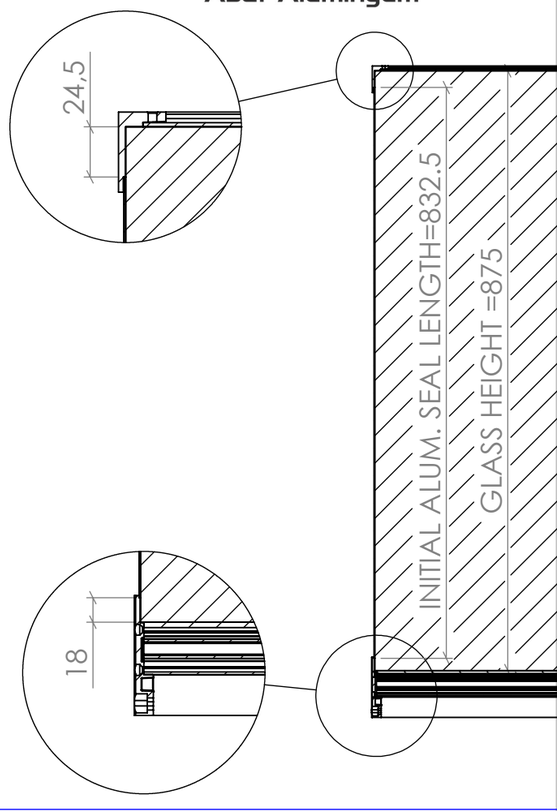

3.3.2. LENGTH CALCULATION OF GLASS SEAL

FORMULA: ALUM. SEAL LENGTH CALCULATION

GLASS HEIGHT	−	BASE INTERMEDIATE CAPS GAP DIMENTION	−	GLASS GAP DIMENTION INTO BAR CONJOINING CAP	=	ALUM. SEAL LENGTH
875 MM		15.5 MM		24.5 MM		835 MM

ALUMINUM GLASS SEAL

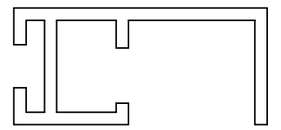

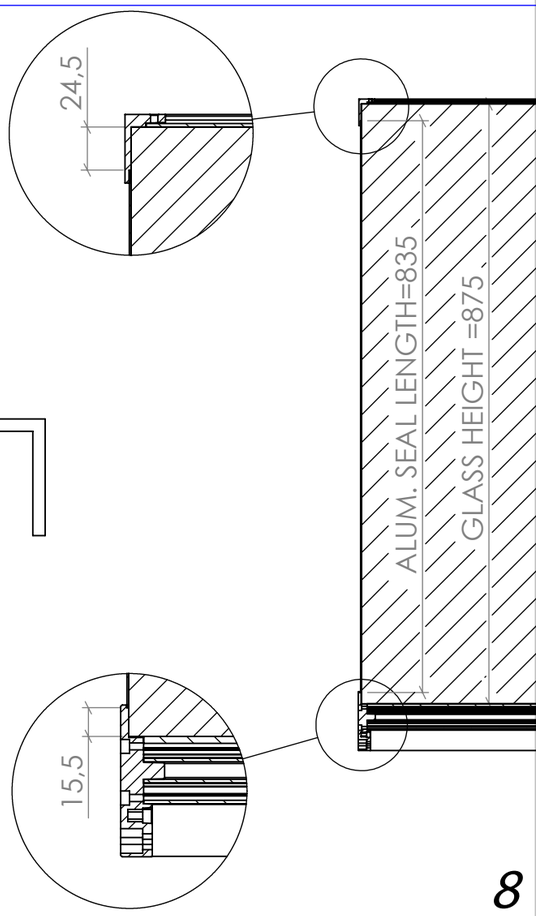

Asaf Alüminyum

3.4. SIDE COLUMN PROFILE CALCULATION METHOD

FORMULA: SIDE COLUMN CALCULATION

SYSTEM HEIGHT	–	LOWER BASE PROFILE HEIGHT	–	UPPER BASE PROFILE HEIGHT	=	SIDE COLUMN PROFILE LENGHT
1000 MM		9 MM		51 MM		940 MM

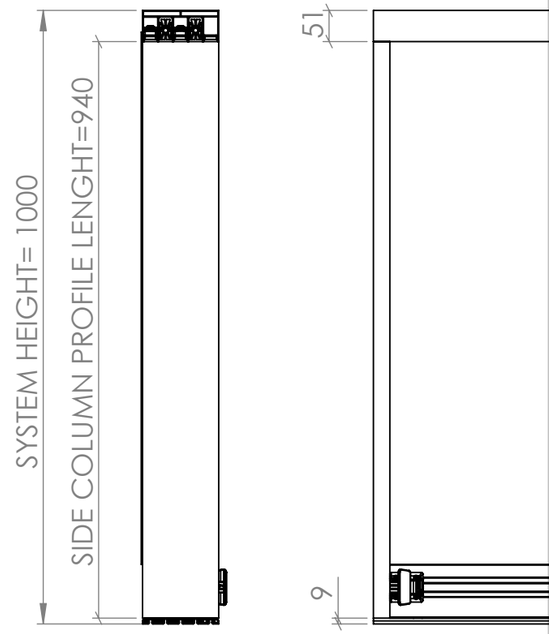

3.5. LENGTH CALCULATION OF H TRANPARENT SEAL

♦ H SEAL IS UTİLİZED AT EDGES OF 2 MIDDLE PANELS. H SEAL LENGTH IS THE SAME AS FOR AN INITIAL ALUMINUM SEAL.

H-SEAL

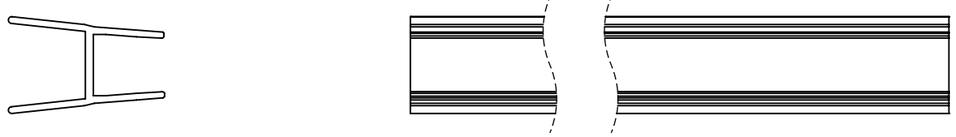

3.6. FRAME PROFILE CALCULATION GUIDE

♦ AS MENTIONED IN PART «TAKING MEASURES», FRAME PROFILE MUST BE CUT AS SYSTEM LENGTH.

LOWER FRAME PROFILE

UPPER FRAME PROFILE

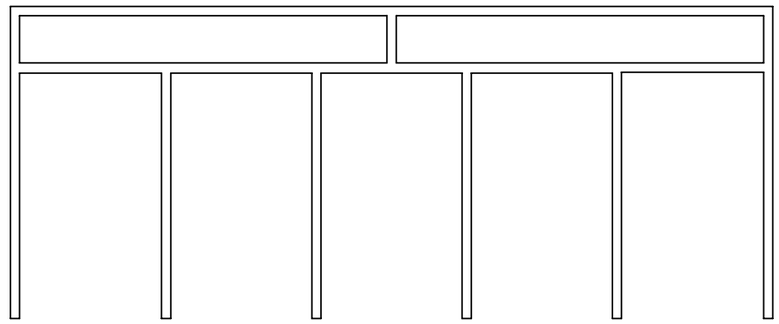

3.7.EXAMPLE OF CALCULATION

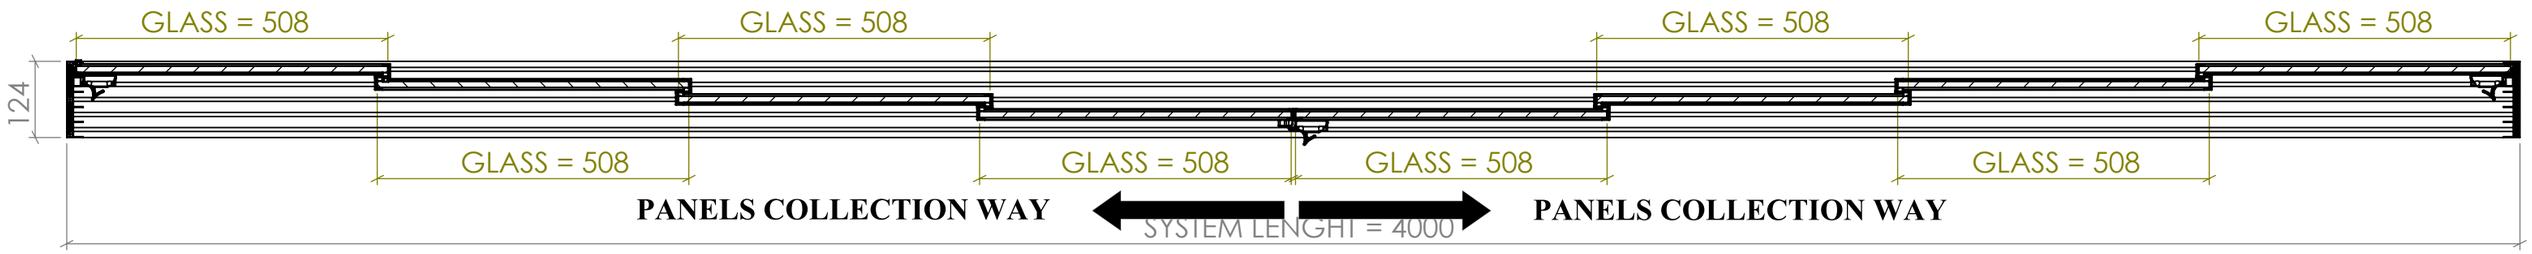

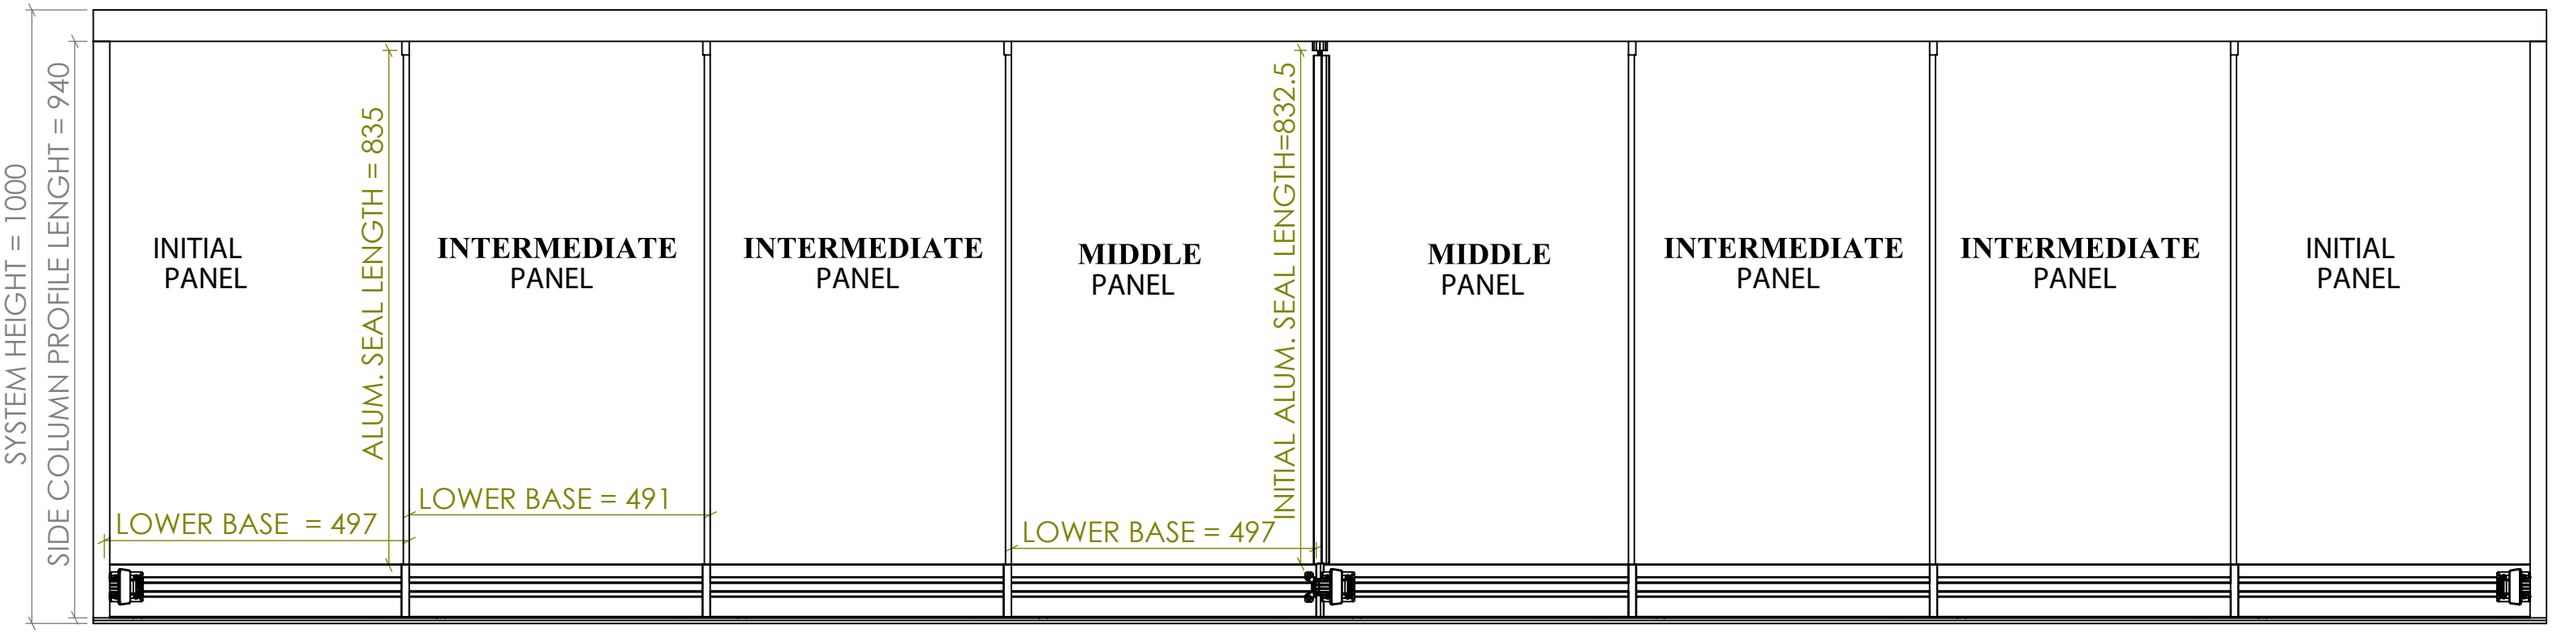

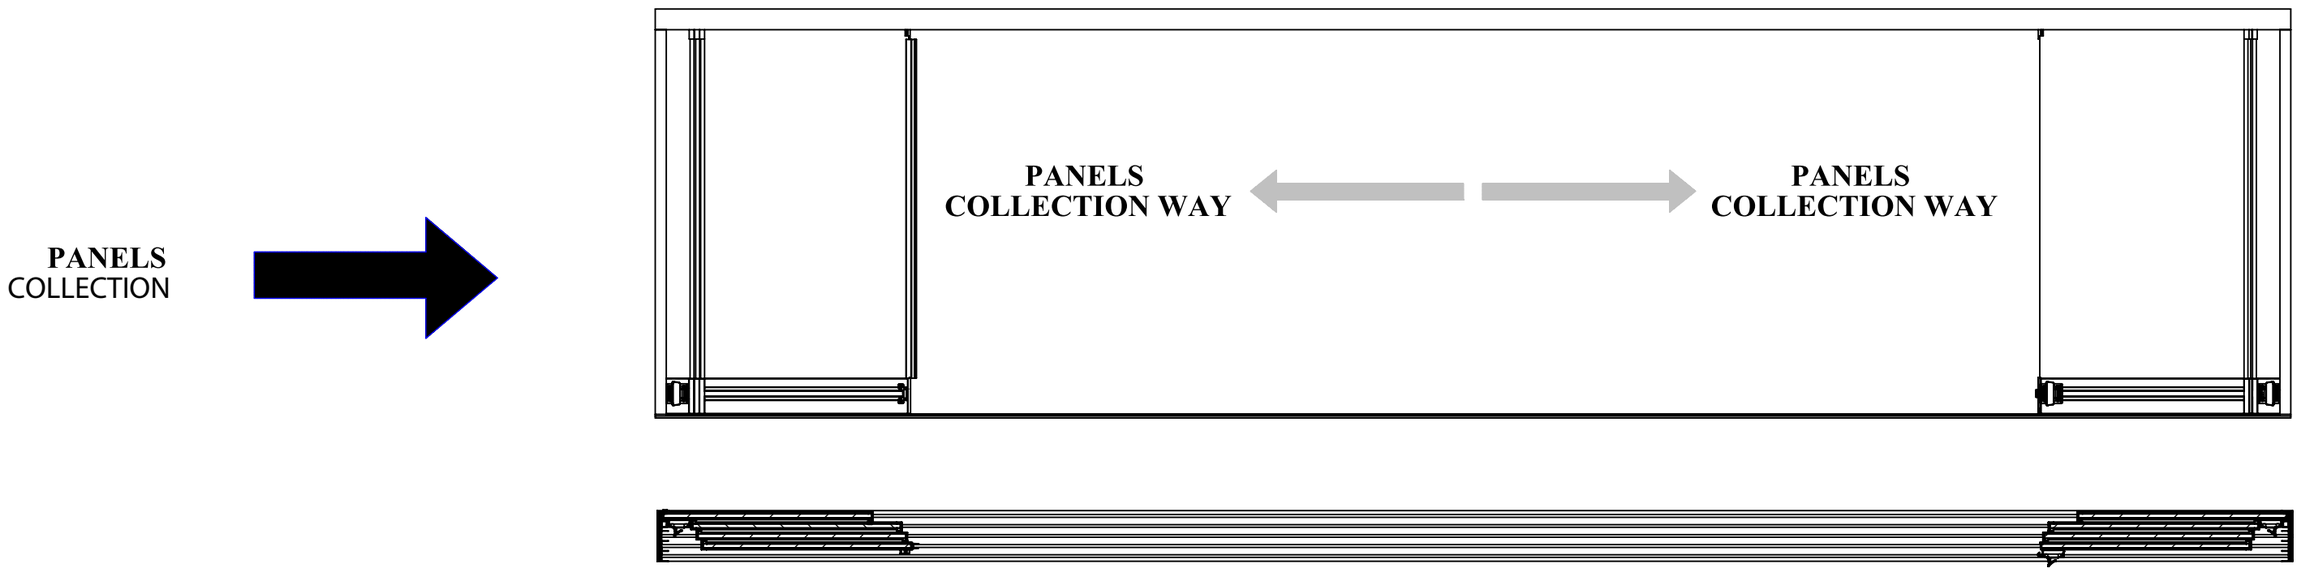

4. PRODUCTION STEPS OF ASF SLIDING SYSTEM WITHOUT THRESHOLD

1. STEP

UPPER BASE PROFILE CUTTING

♦ UPPER BASE PROFILE MEASURES WAS OBTAINED BY DESCRIBED FORMULA IN CHAPTER «UPPER BASE PROF. CALCULATION». THEN, FOR EACH PANEL ONLY 1 PIECE CAN BE CUT.

UPPER BASE PROFILE

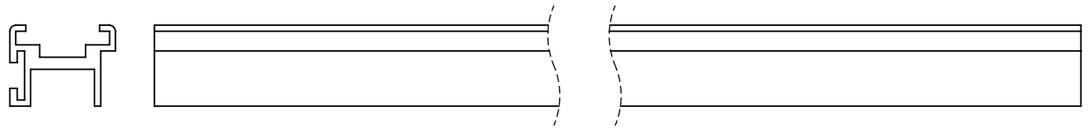

2. STEP

LOWER BASE PROFILE CUTTING

♦ LOWER BASE PROFILE OF INITIAL AND MIDDLE PANELS ARE DIFFERENT AS DESCRIBED IN CHAPTER «LOWER BASE PROF. CALCULATION». ACCORDING TO THE VALUES, FOR EACH PANEL IS CUT ONLY ONE PIECE.

LOWER BASE PROFILE

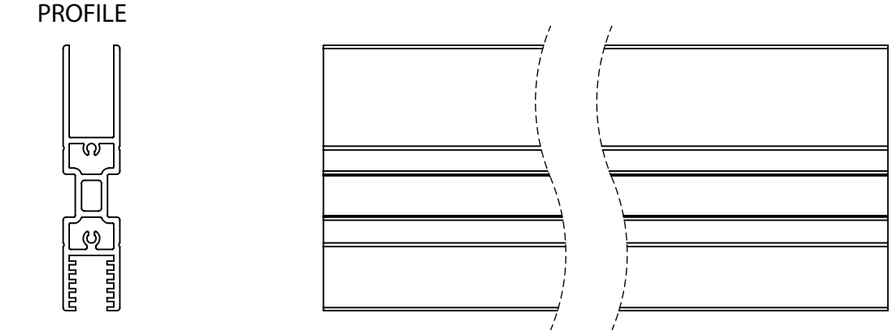

3. STEP

INITIAL ALUM. SEAL AND H-SEAL CUTTING

♦ SEAL CAN BE CUT REFER TO DESCRIBED FORMULA. INITIAL SEAL WILL BE INSTALLED ON INITIAL AND MIDDLE PANELS FROM THE OUTER EDGE

♦ H SEAL LENGTH IS THE SAME AS FOR AN INITIAL ALUMINUM SEAL.

INITIAL ALUMINUM GLASS SEAL



H-SEAL

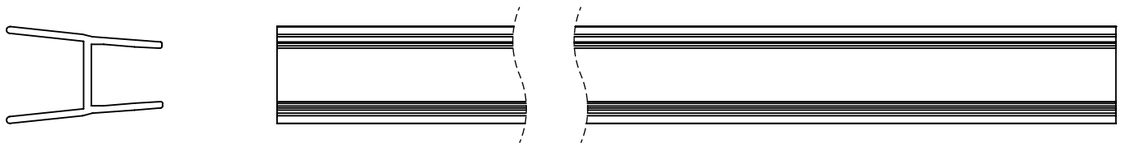

4. STEP

INTERMEDIATE SEAL CUTTING

♦ INTERMEDIATE SEAL CAN BE CUT REFER TO DESCRIBED FORMULA. THE SEAL WILL BE INSTALLED ON THE INTERMEDIATE PANELS FROM THE INNER EDGE.

ALUMINUM GLASS SEAL



BOTTOM WHEEL INSTALLATION

8. STEP

- BOTTOM WHEELS SLIDE ON LOWER BASE PROFILE UNTIL INTERMEDIATE **CAPS, AS SHOWN ON DRAWING. THEN IT'S SCREWED.**

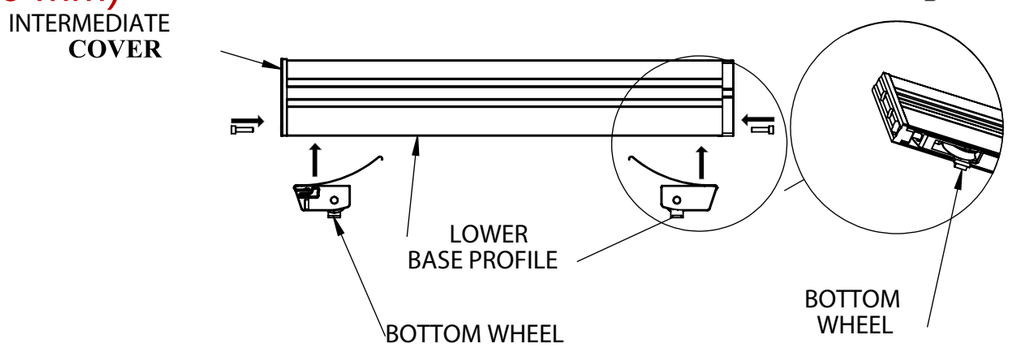

BRUSH SEAL INSTALLATION TO UPPER BASE PROFILE OR ALUMINUM SEAL

9. STEP

- **BRUSH SEAL IS CUT TO LENGTH OF THE UPPER BASE PROFILE, AND INSERTS INTO IT.**
- **BRUSH SEAL IS CUT TO LENGTH OF THE ALUMINUM SEA UNTIL CONJOINING BAR, AND INSERTS INTO IT.**

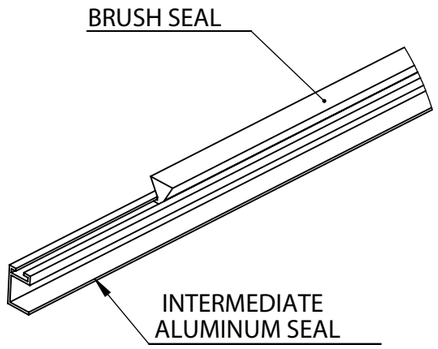

UPPER LOWER BASE PROFILE AND ALUMINUM SEAL INSTALLATION TO GLASS

10. STEP

- **LOWER BASE PROFILE IS GLUED TO GLASS.**
- PREPARED ALUMINUM SEAL WITH BRUSH SEAL ARE MOUNTED TO **THE GLASS PANEL .IT MUST REACH TO CONJOINING BAR.**
- **INSTEAD OF ALUMINUM SEAL, H-SEAL IS MOUNTED ON THE MIDDLE PANELS OPPOSITE EDGES.**
- **UPPER BASE PROFILE IS GLUED TO GLASS.**

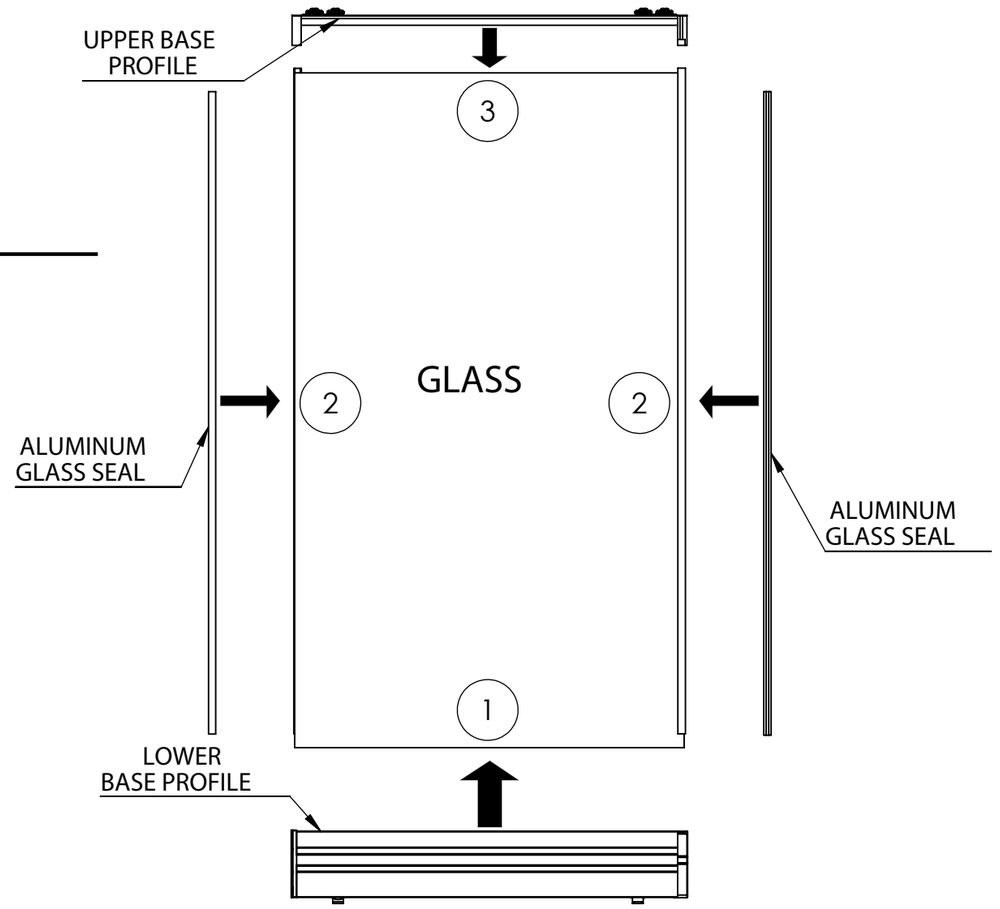

www.asafalu.com.tr

Asaf Alüminyum

4.1. NEEDED PARTS FOR INITIAL PANEL

◆ NEEDED PARTS OF MIDDLE AND INITIAL PANELS ARE SAME, EXCEPT AN INITIAL SEAL. INSTEAD OF INITIAL SEAL AT THE MIDDLE PANEL H-SEAL IS USED.

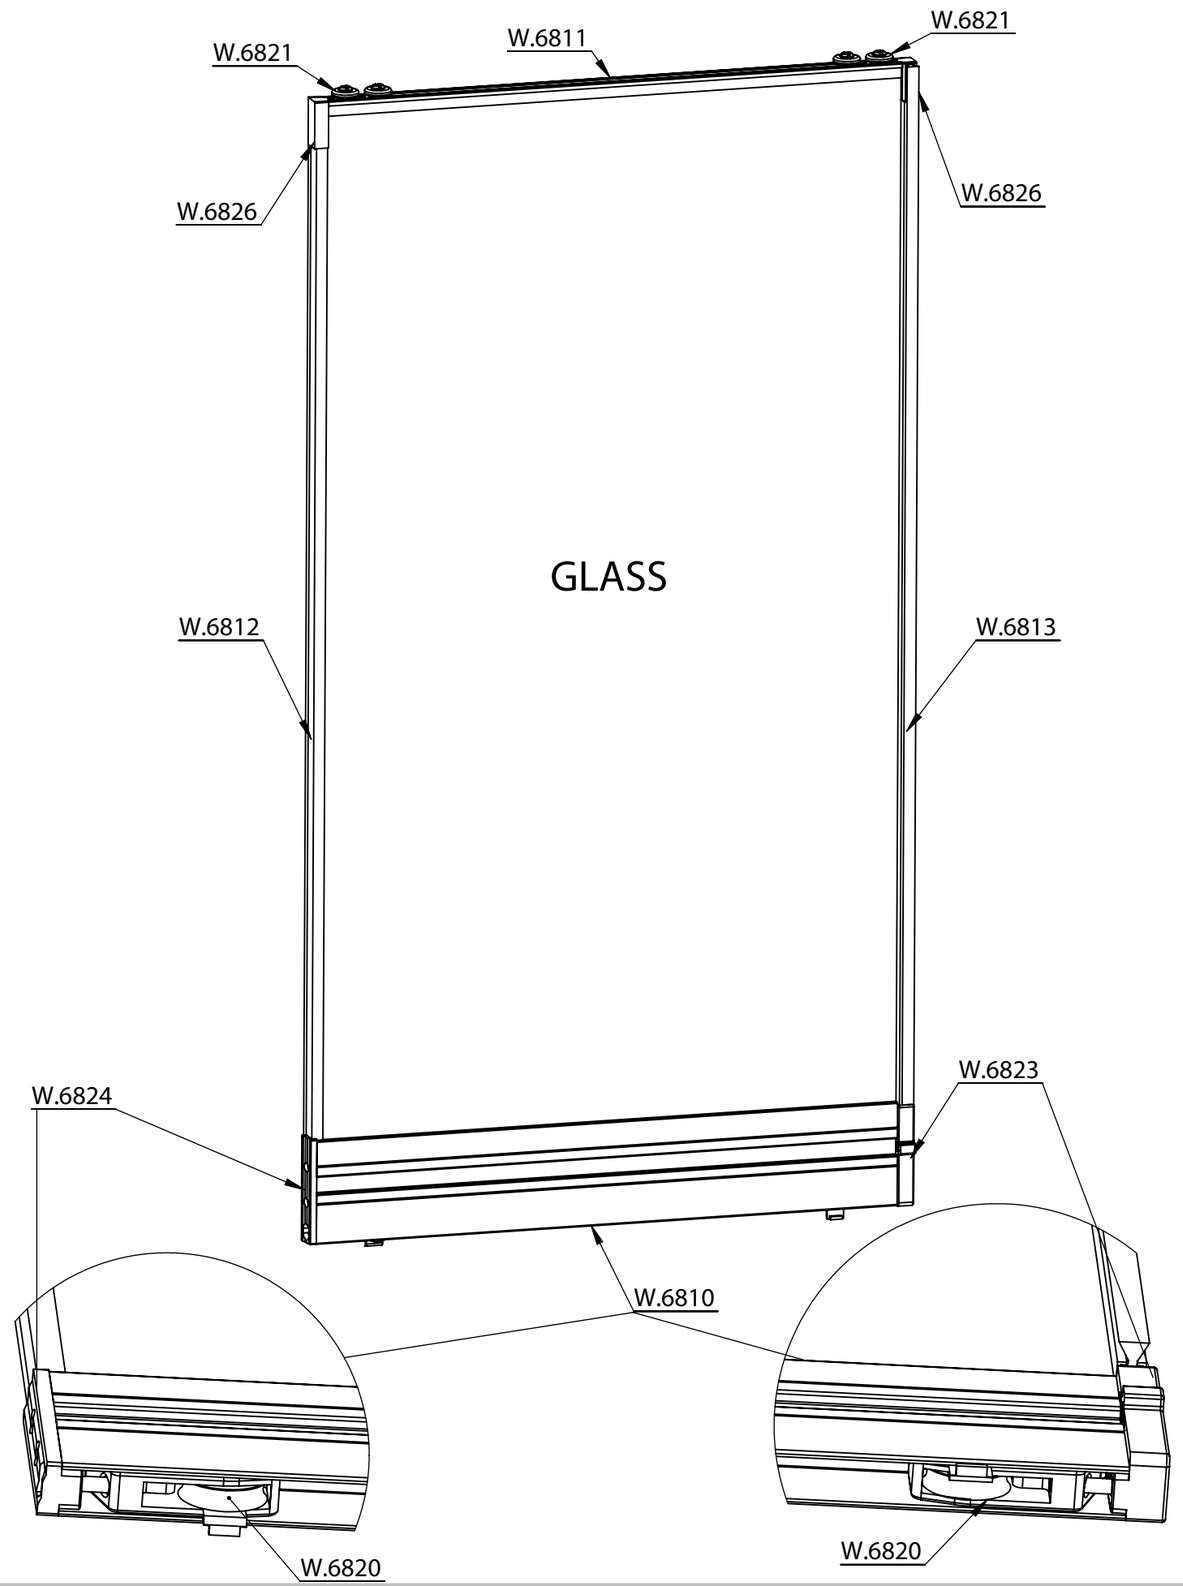

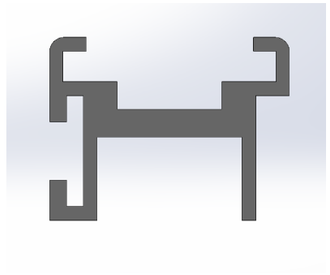

W.6811
UPPER BASE PROFILE

ONLY ONE PIECE IS USED AT EACH GLASS PANEL FROM SYSTEM TOP.

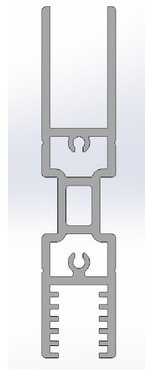

W.6810
BOTTOM BASE PROFILE

ONLY ONE PIECE IS USED AT EACH GLASS PANEL FROM SYSTEM BOTTOM.

W.6813
INITIAL ALUMINUM SEAL

ITS USED ON THE OUTER EDGES OF INITIAL PANELS AS INSULATION.

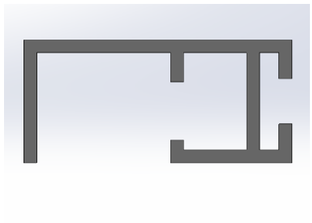

W.6812
INTERMEDIATE ALUMINUM SEAL

ITS USED BETWEEN GLASS PANLES AS INSULATION

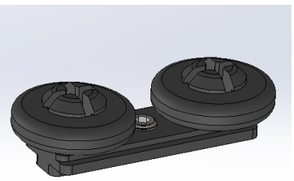

W.6821
UPPER WHEEL

IT'S MOUNTED ON THE EACH EDGE OF THE UPPER GLASS PROFILE, ENSURING BALANCE OF THE SYSTEM.

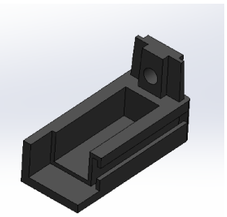

W.6826
BAR CONJOINING CAP

IT'S MOUNTED ON THE EACH TOP EDGE OF THE GLASS PANEL.

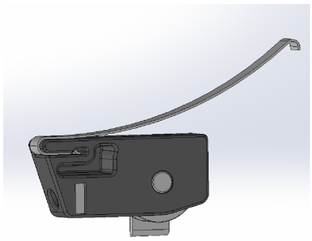

W.6820
BOTTOM WHEEL

IT'S MOUNTED ON THE EACH EDGE OF THE LOWER GLASS PROFILE, PROVIDING MOTION OF THE PANELS.

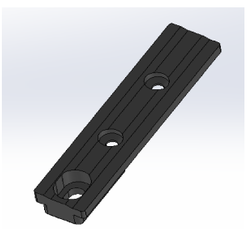

W.6824
MIDDLE AND INITIAL CAPS

IT'S INSTALLED ON THE LOWER BASE PROFILE AT THE END OR MIDDLE POINTS.

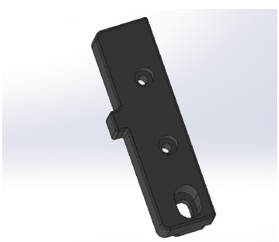

W.6823
INTERMEDIATE BASE CAPS

IT'S MOUNTED ON THE LOWER BASE PROFIL IN ORDER TO DRAG THE PANELS.

Asaf Alüminyum

4.2. NEEDED PARTS FOR INTERMEDIATE PANEL

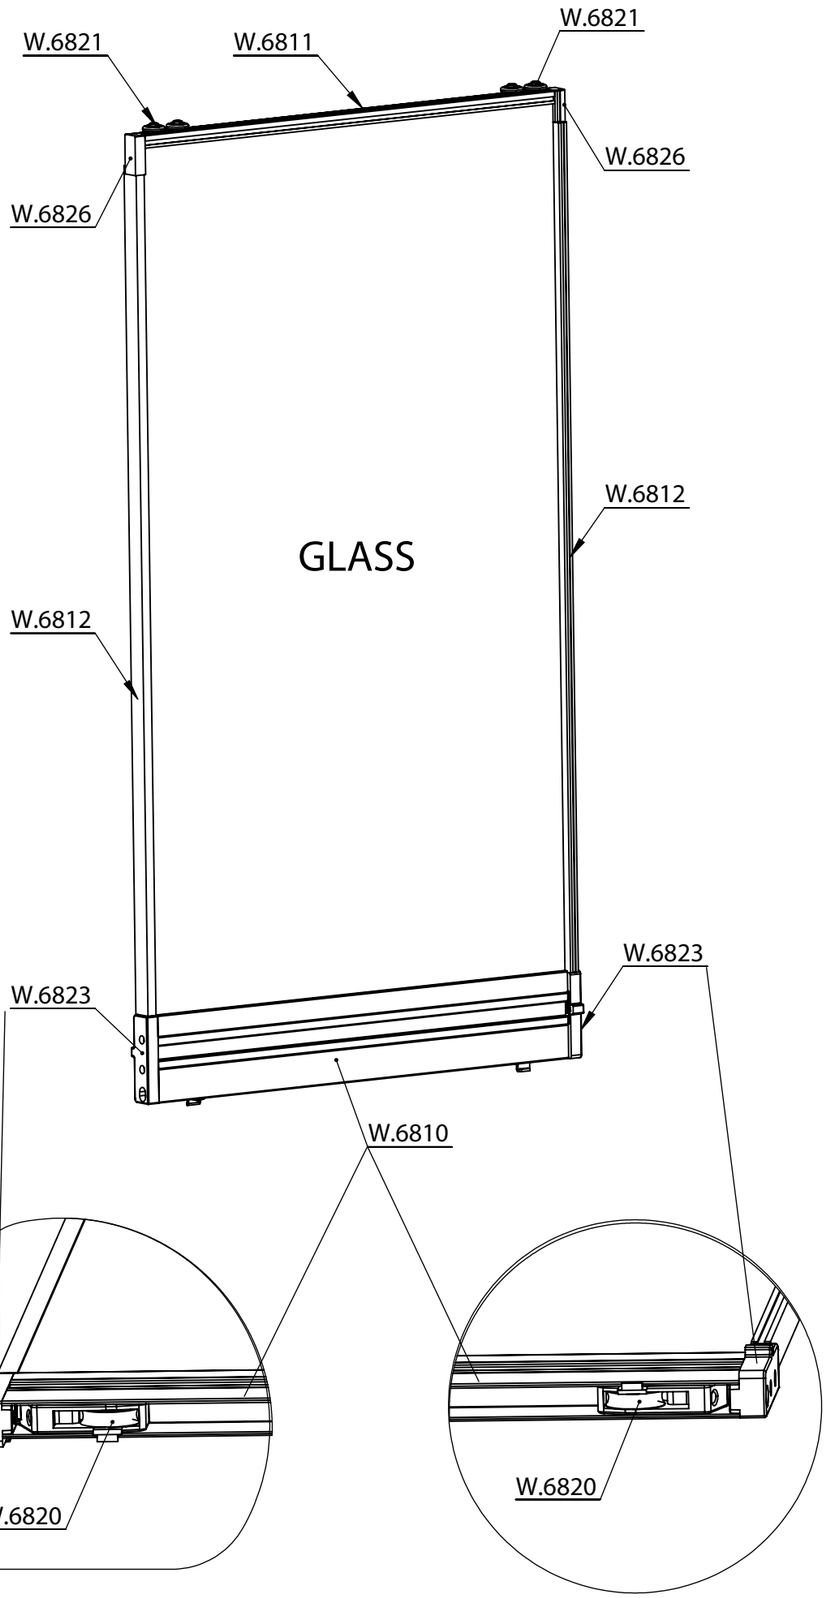

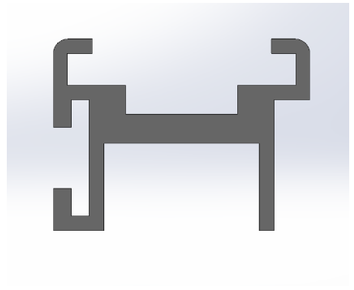

W.6811
UPPER BASE PROFILE

ONLY ONE PIECE IS USED AT EACH GLASS PANEL FROM SYSTEM TOP.

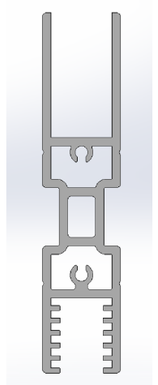

W.6810
BOTTOM BASE PROFILE

ONLY ONE PIECE IS USED AT EACH GLASS PANEL FROM SYSTEM BOTTOM.

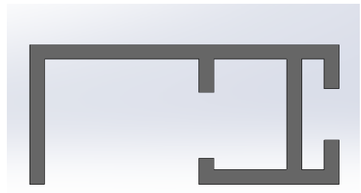

W.6812
INTERMEDIATE ALUMINUM SEAL

ITS USED BETWEEN GLASS PANLES AS INSULATION

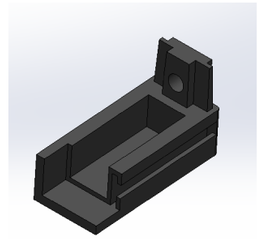

W.6826
BAR CONJOINING CAP

IT'S MOUNTED ON THE EACH TOP EDGE OF THE GLASS PANEL.

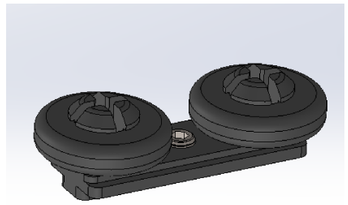

W.6821
UPPER WHEEL

IT'S MOUNTED ON THE EACH EDGE OF THE UPPER GLASS PROFILE, ENSURING BALANCE OF THE SYSTEM.

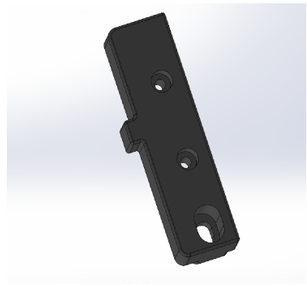

W.6823
INTERMEDIATE BASE CAPS

IT'S MOUNTED ON THE LOWER BASE PROFIL IN ORDER TO DRAG THE PANELS.

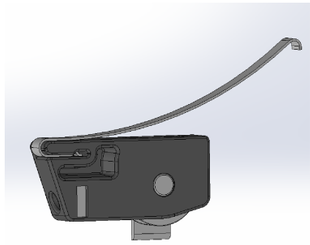

W.6820
BOTTOM WHEEL

IT'S MOUNTED ON THE EACH EDGE OF THE LOWER GLASS PROFILE, PROVIDING MOTION OF THE PANELS.

5. PRODUCTION STEPS OF ASF SLIDING SYSTEMS WITHOUT THRESHOLD

ALTERNATİVE 1

1.STEP

1 ♦ FOR THE SYSTEM INSTALLATION LOWER FRAME PROFILE MUST BE PLACED ON A FLAT FLOOR.

2 ♦ THE SIDE COLUMN PROFILES ARE MOUNTED TO THE LOWER FRAME PROFILE BY BOTTOM **SIDE COLUMN EQUIPMENT.**

3 ♦ TOP FRAME PROFILE IS MOUNTED TO SIDE COLUMN **PROFİLE BY TOP SIDE COLUMN EQUIPMENT.**

4 ♦ **AFTER SYSTEM İNSTALLATION, TOP FRAME PROFILE IS FIXED TO TOP PARAPATE AND BOTTOM FRAME PROFILE IS FIXED TO NETHER FLOOR WITH GLUE.**

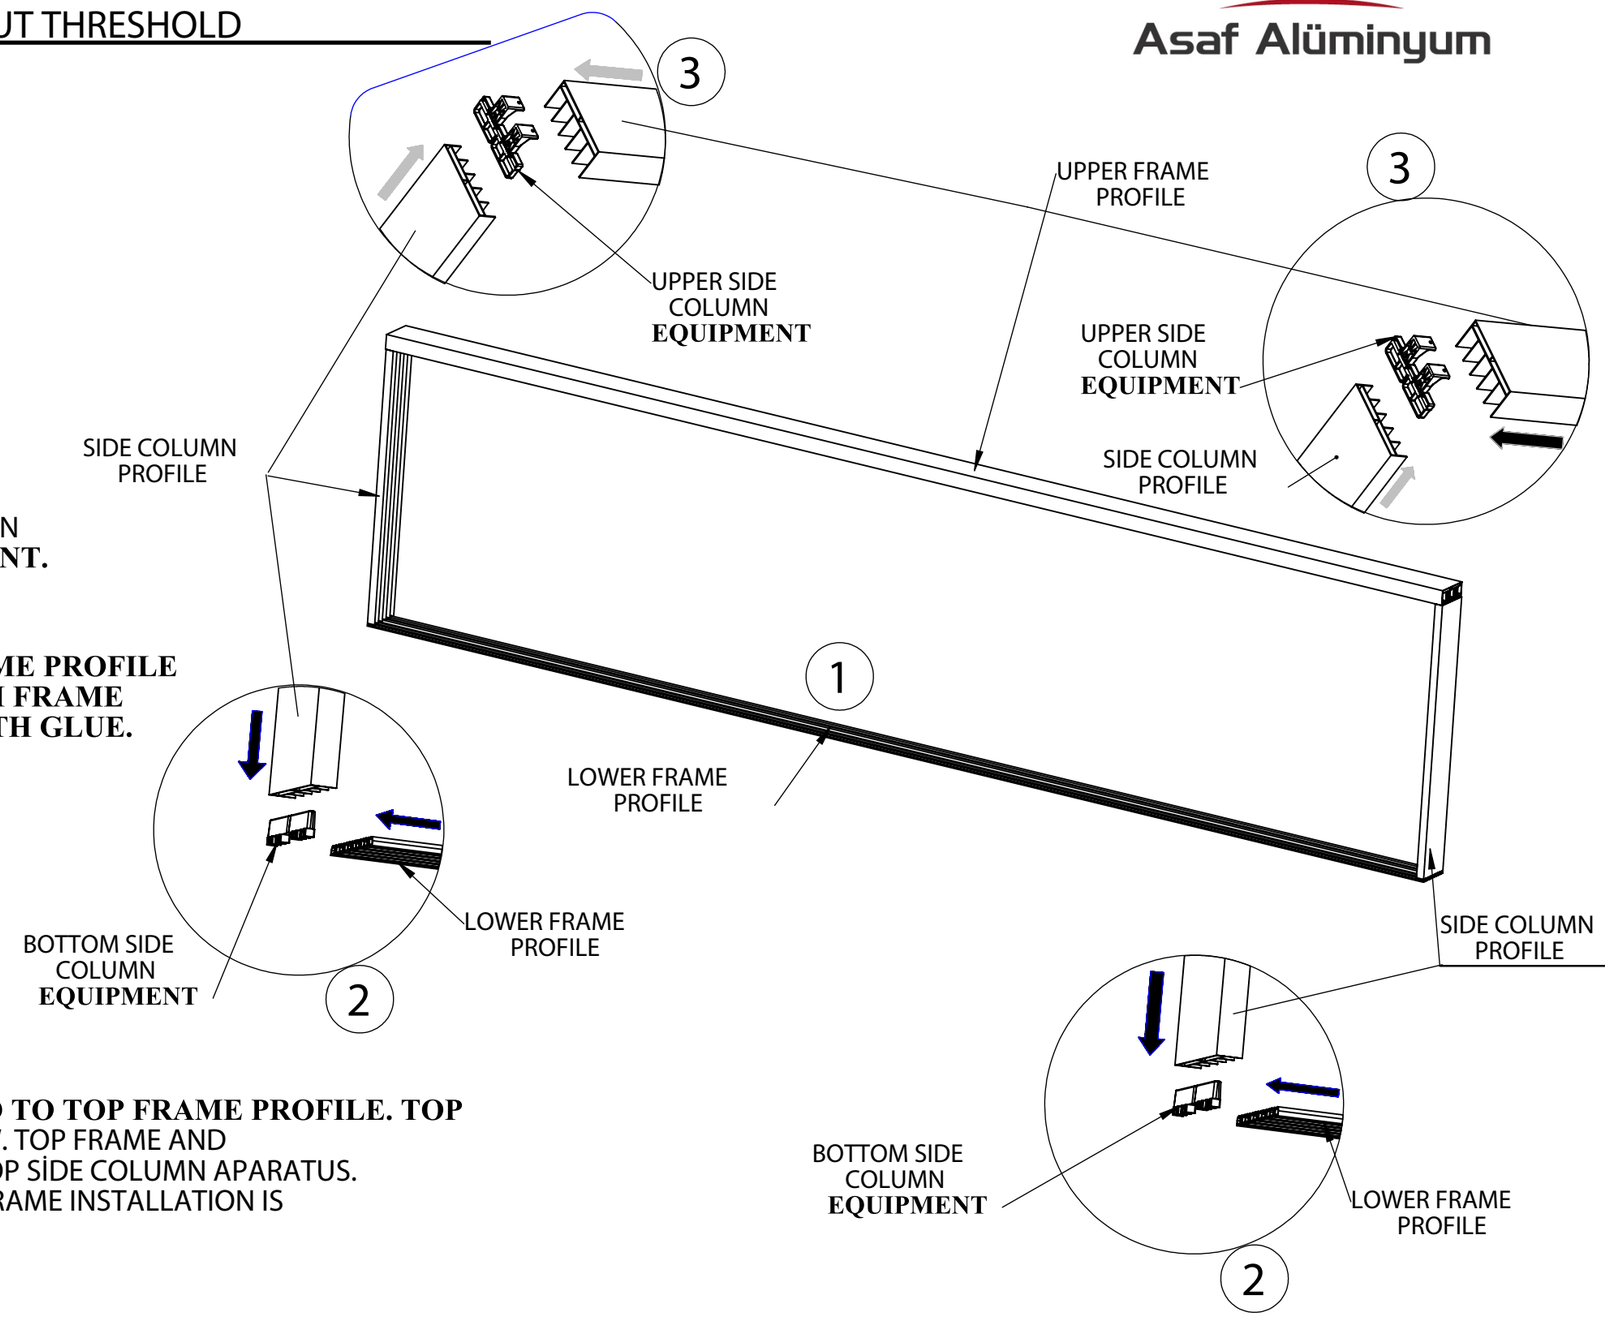

ALTERNATİVE 2

♦ **TOP SIDE COLUMN APARATUS İS FIXATED TO TOP FRAME PROFILE. TOP** FRAME IS FICATED TO TOP PERAPETE WITH SCREW. TOP FRAME AND SIDE COLUMN APARATUS ARE MOUNTED WITH TOP SİDE COLUMN APARATUS. AT THE SAME TIME SIDE COLUMNS AND LOWER FRAME INSTALLATION IS DONE WITH LOWER SIDE COLUMN APARATUS

2.STEP

♦ INSTALLATİON CAN BE MADE EASIER IF ONE OF THE BASE INTERMEDIATE FLAT COVER AND LOWER WHEEL IS REMOVED. NOW THIS WHEEL CAN BE **FIXATE TO THE BOTTOM FRAME RPOFILE.**

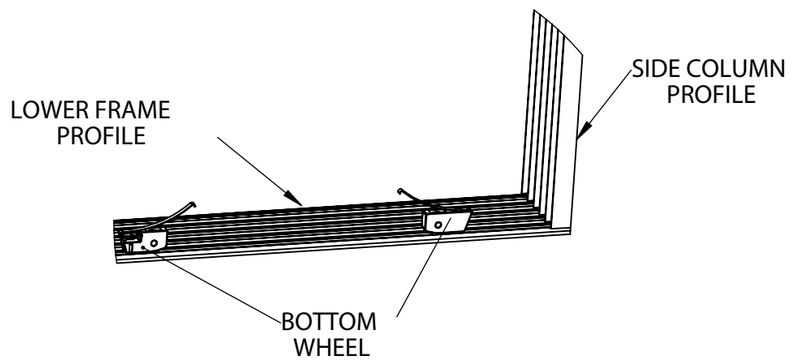

3.STEP

- YOU SHOULD START INSTALLATION FROM ONE SIDE OF SYSTEM. THE TOP WHEEL OF THE PANELS IS PASSED TO TOP FRAME POFILE. ROM CAPS SIDE IN ORDER TO PROVIDE THE CONVENIENCE INSTALLATION, BOTTOM WHEEL PASSES THROUGH BOTTOM BASE PROFILE. BASE INTERMEDIATE COVER IS SCREWED TO THE BASE.

- AFTER PANELS CONNECTED TO THE SYSTEM, BETWEEN THE TOP CASE AND TOP WHEEL TOLERANCE WİLL BE 15-20 MM.

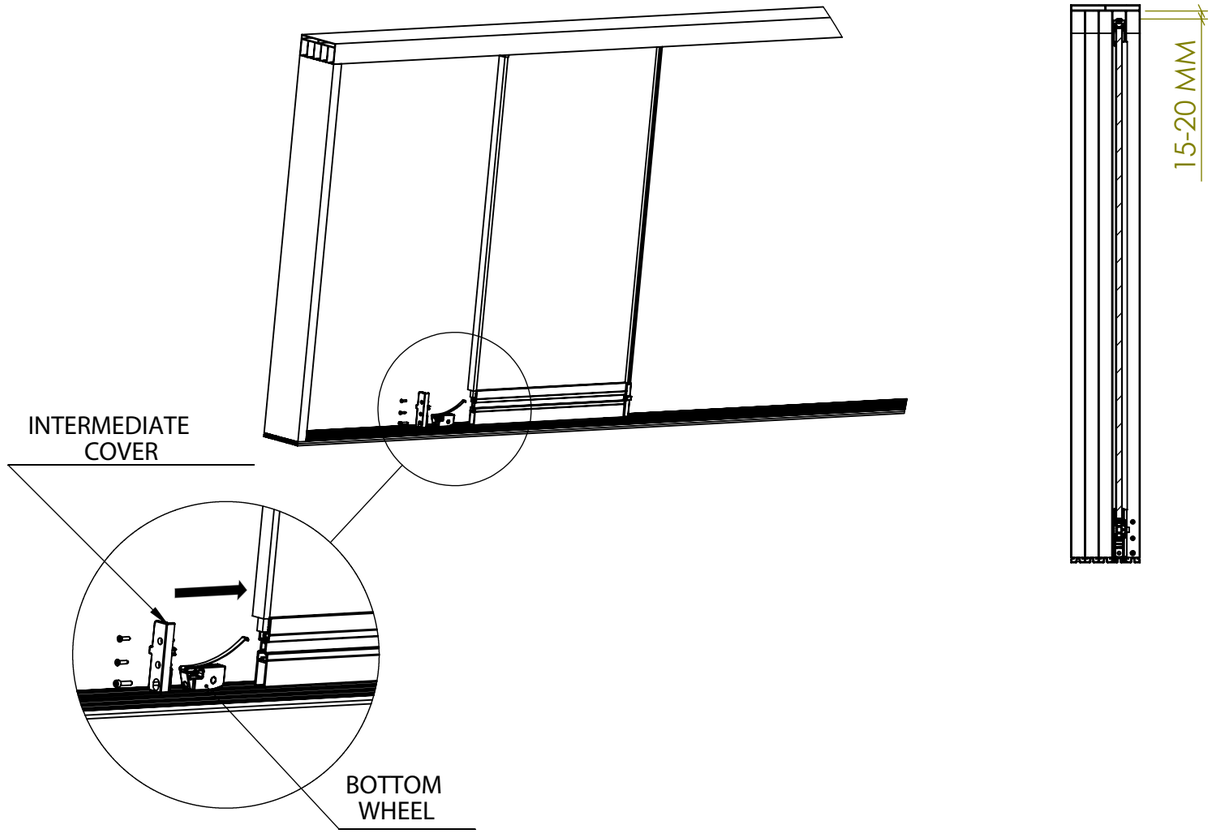

4.STEP

- WHILE SECOND PANEL INSTALLATION IT MUST BE IN THE MIDDLE OF FIRST PANEL AS SHOWN İN DRAWING. THEN INTERMEDIATE CAPS AND WHEELS CAN BE MOUNTED TO BOTTOM BASE PROFILE. FOR THE FUTHER PANELS PROCESS OF CAPS AND WHEELS MONTAGE IS SHOWN AT STEPS 5 AND 6.

- YOU CAN ADJUST GAPS BETWEEN THE GLASS PANELS BY USING WHEELS AS SHOWN AT THE PICTURE BELOW.

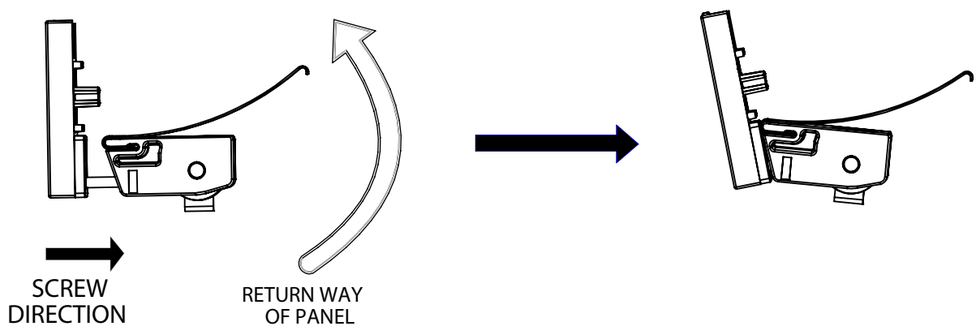

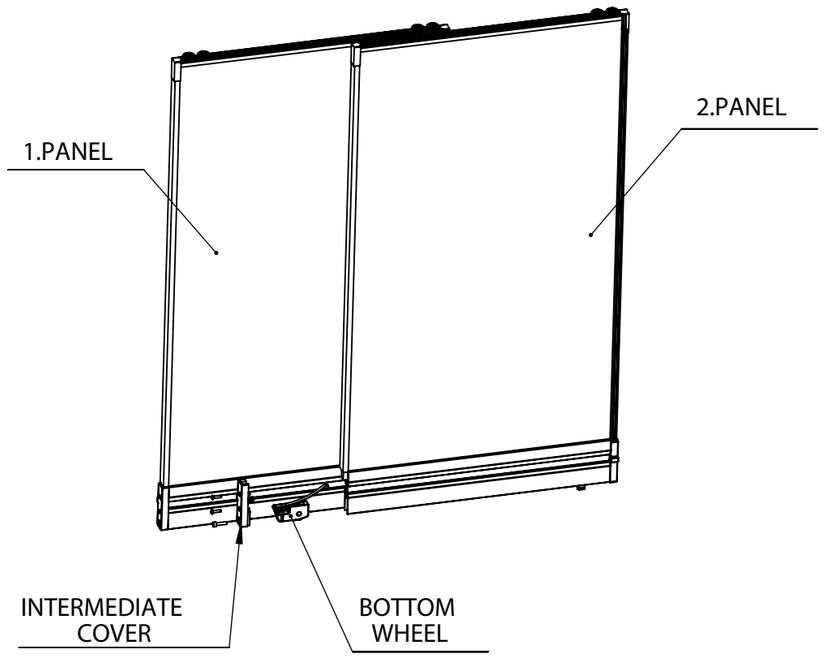

TECHNICAL CATALOGUE OF ASF SLIDING SYSTEM WITHOUT/WITH THRESHOLD (8 and 10 mm)

Asaf Alüminyum

5.STEP

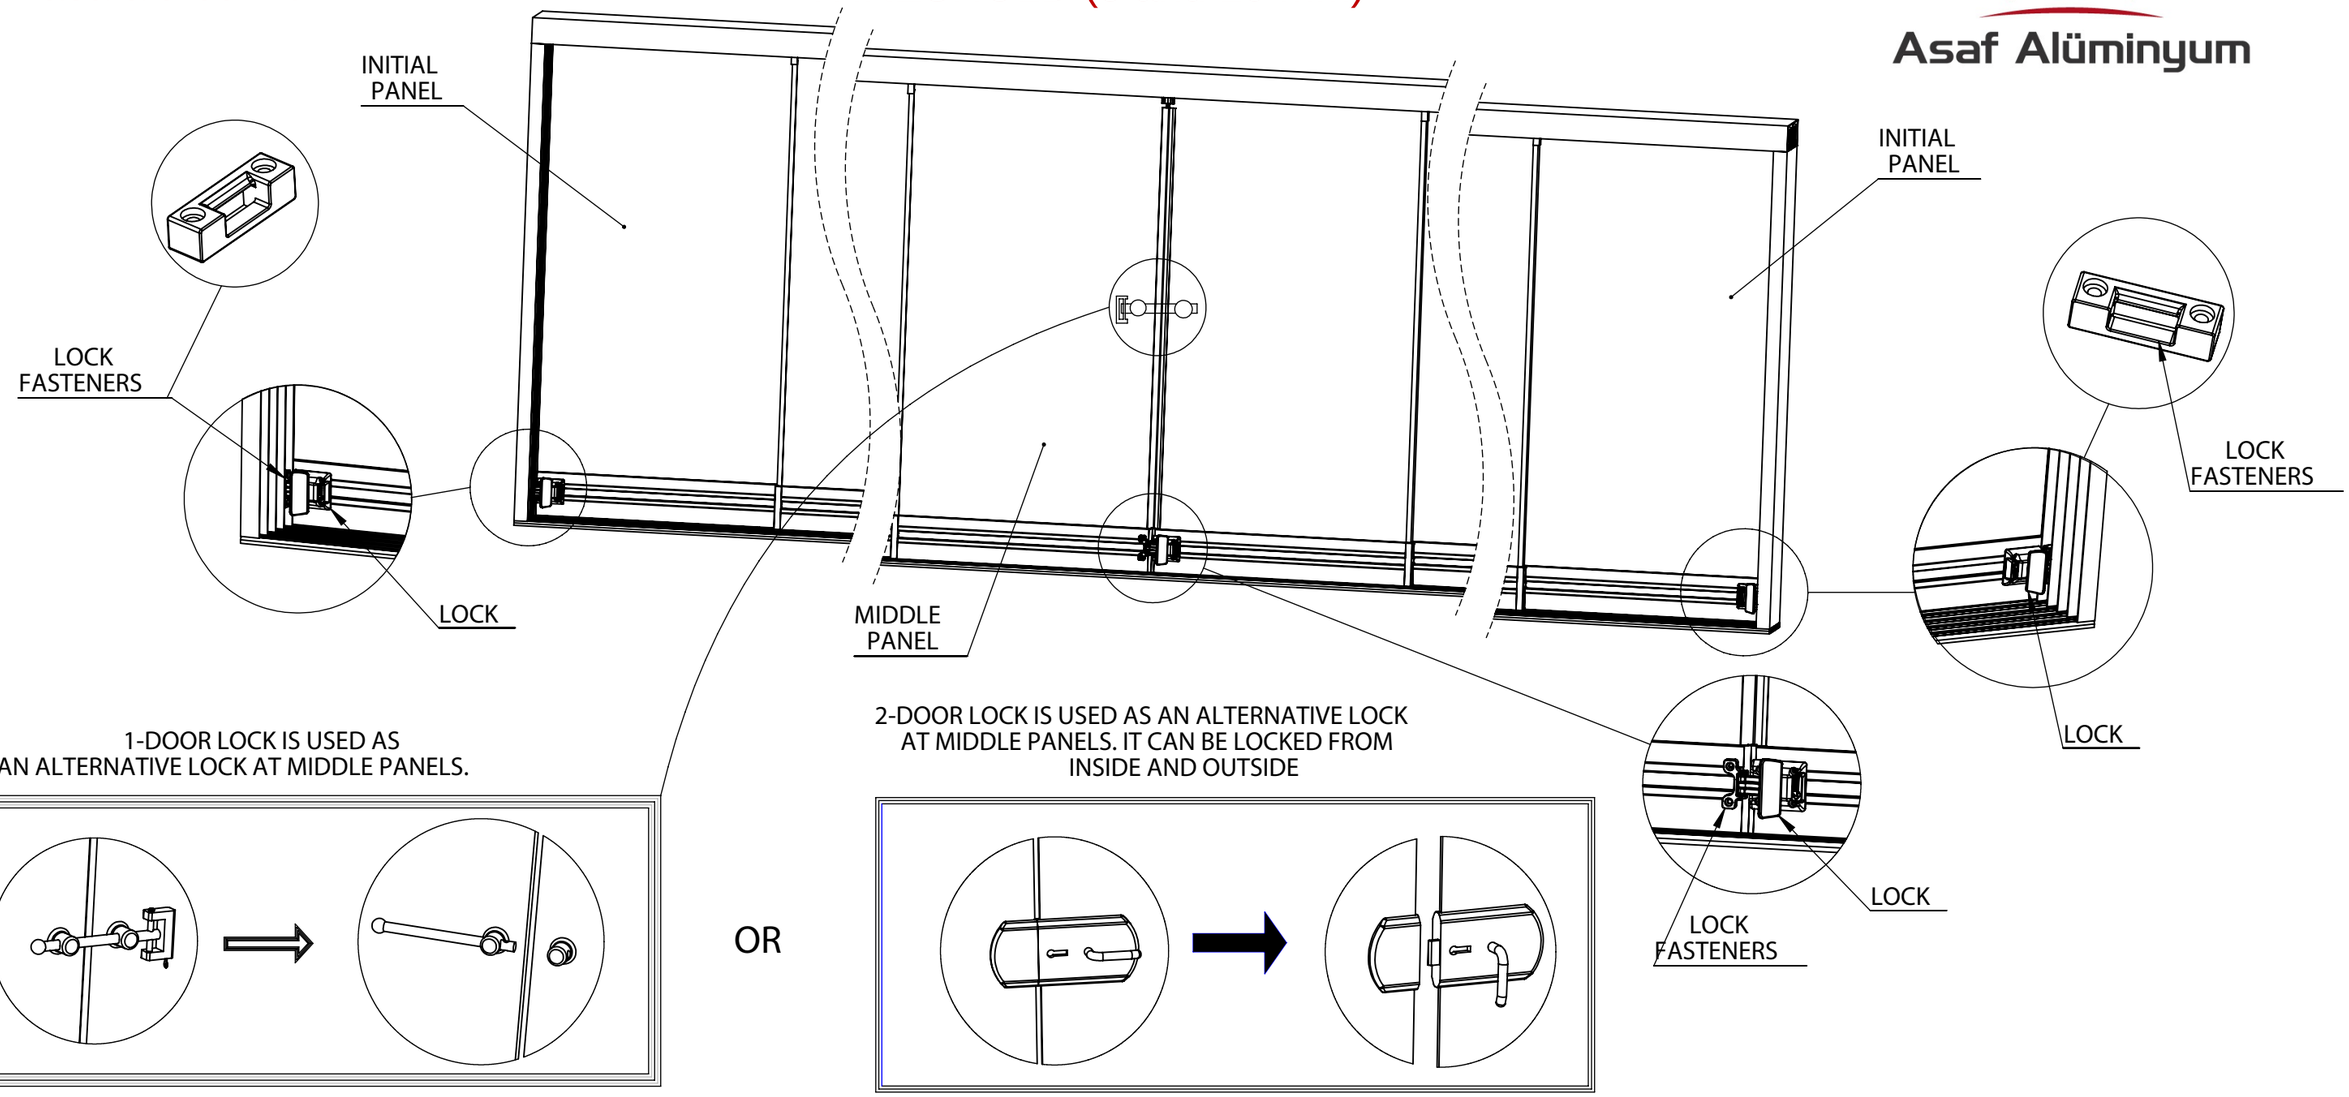

1-DOOR LOCK IS USED AS AN ALTERNATIVE LOCK AT MIDDLE PANELS.

OR

2-DOOR LOCK IS USED AS AN ALTERNATIVE LOCK AT MIDDLE PANELS. IT CAN BE LOCKED FROM INSIDE AND OUTSIDE

- ASF SLIDING SYST. LOCK IS MOUNTED ON THE MIDDLE AND INITIAL PANELS. LOCK FASTENERS IS DIFFERENT FOR TWO TYPE OF PANEL. BELOW YOU CAN FIND CODE OF FASTENERS.
- ON ONE SIDE OF MIDDLE PANEL THE LOCK IS MOUNTED, ON OPPOSITE SIDE FASTENERS IS SCREWED.
- LOCK AND FASTENERS ARE MOUNTED TO THE SIDE COLUMN PANEL DEPENDING ON THE SYSTEM FORM. INITIAL PANEL MAY COİNCİDE BETWEEN SİDE COLUMNS OR IT MAY CAINCIDE EDGE OF SIDE COLUM. THIS TWO EXPLANATIONS ARE GİVEN IN THE PICTURE.

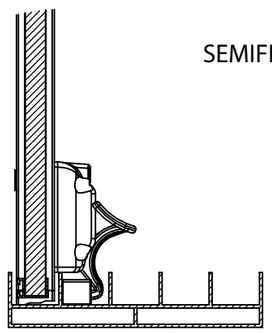

SEMIFINISHED CODE:
Y.6822.01



IT CAN BE INSTALLED AT INITIAL PANELS INTO SIDE COLUMN

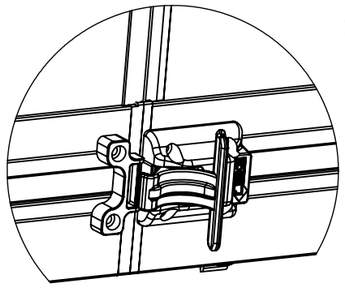

SEMIFINISHED CODE:
Y.6822.02

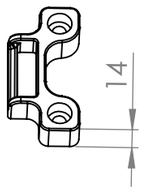

IT CAN BE INSTALLED AT MIDDLE PANELS

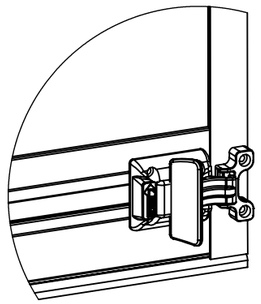

SEMIFINISHED CODE:
Y.6822.03

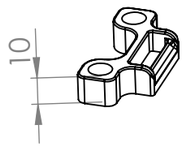

IT CAN BE INSTALLED AT INITIAL PANELS OUTSIDE OF SIDE COLUMN

5.1 INSTALLATED ASF SLIDING SYSTEM WITHOUT THRESHOLD

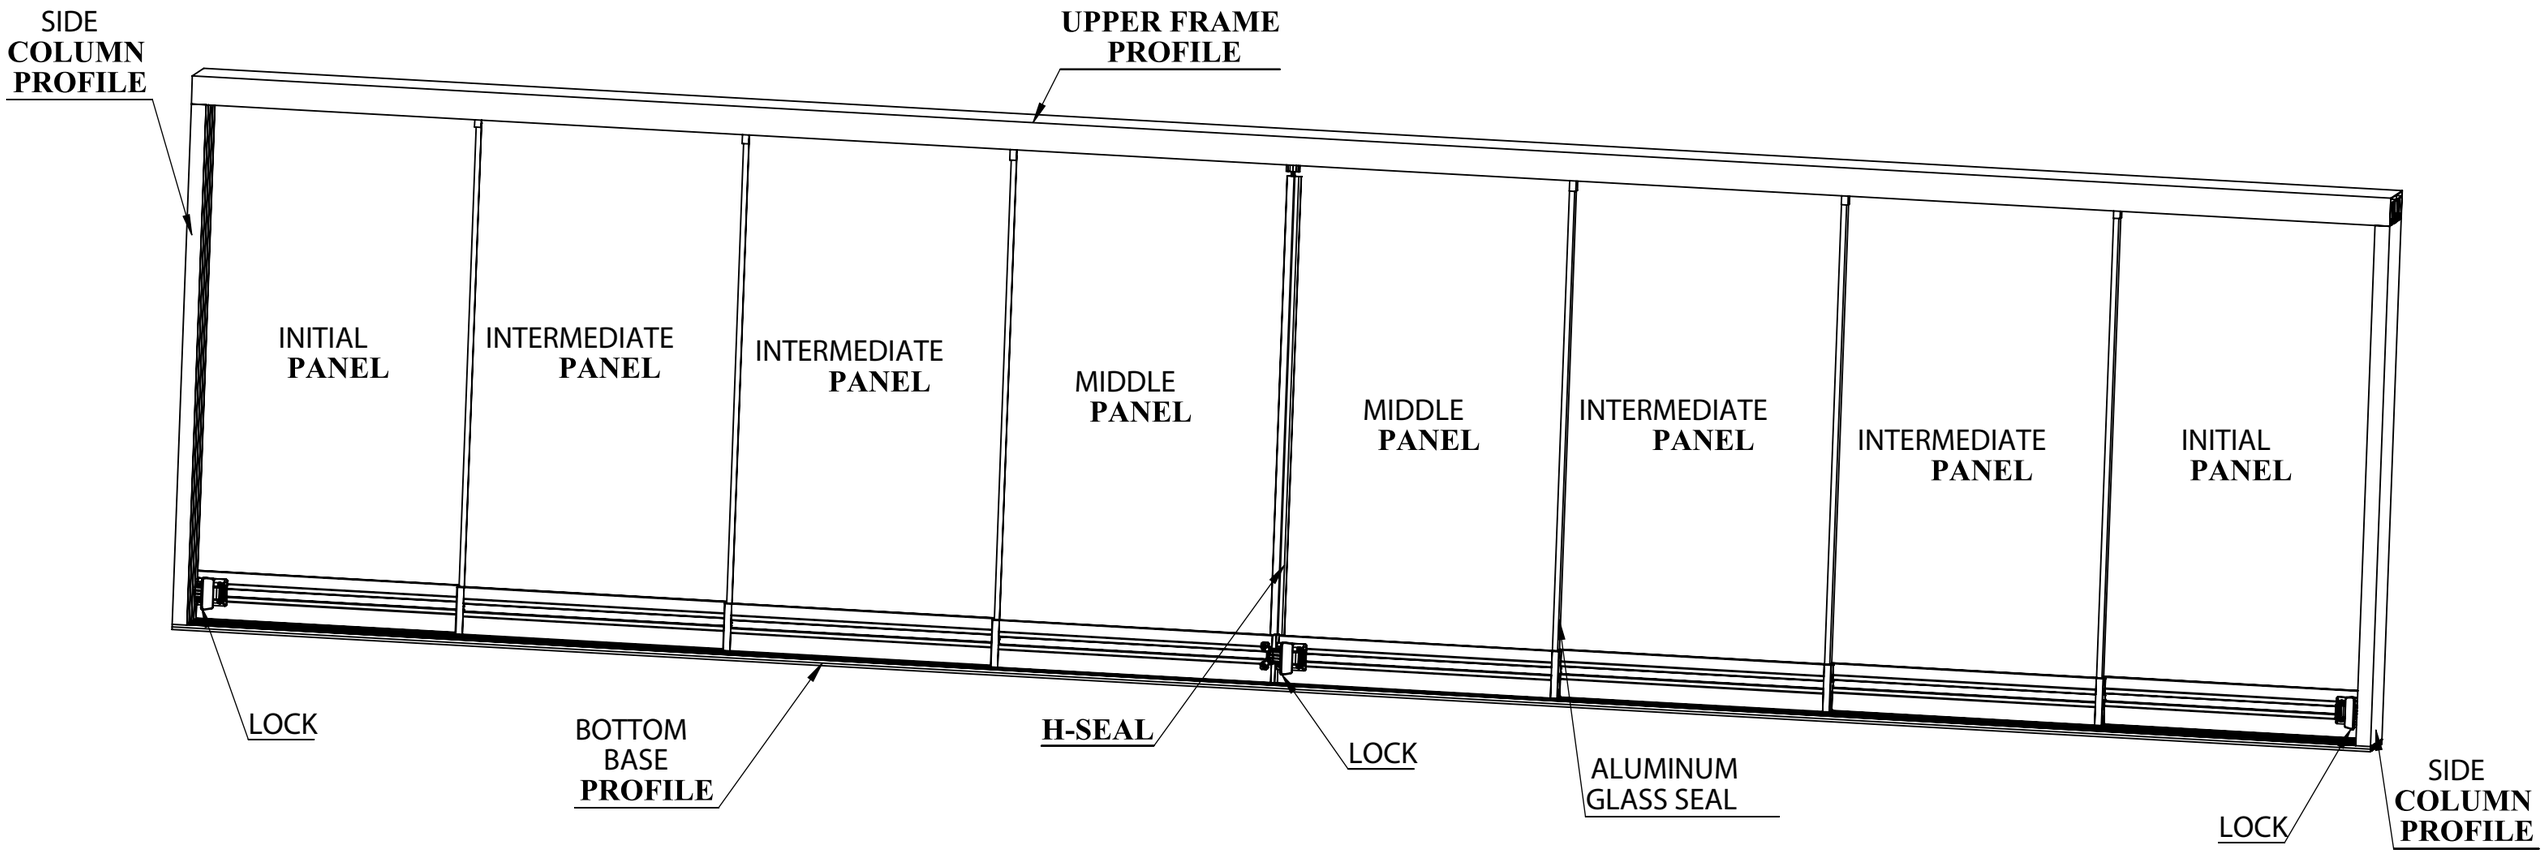

6. ASF SLIDING SYSTEM WITH THRESHOLD CALCULATION

6.1.GLASS CALCULATION GUIDE :

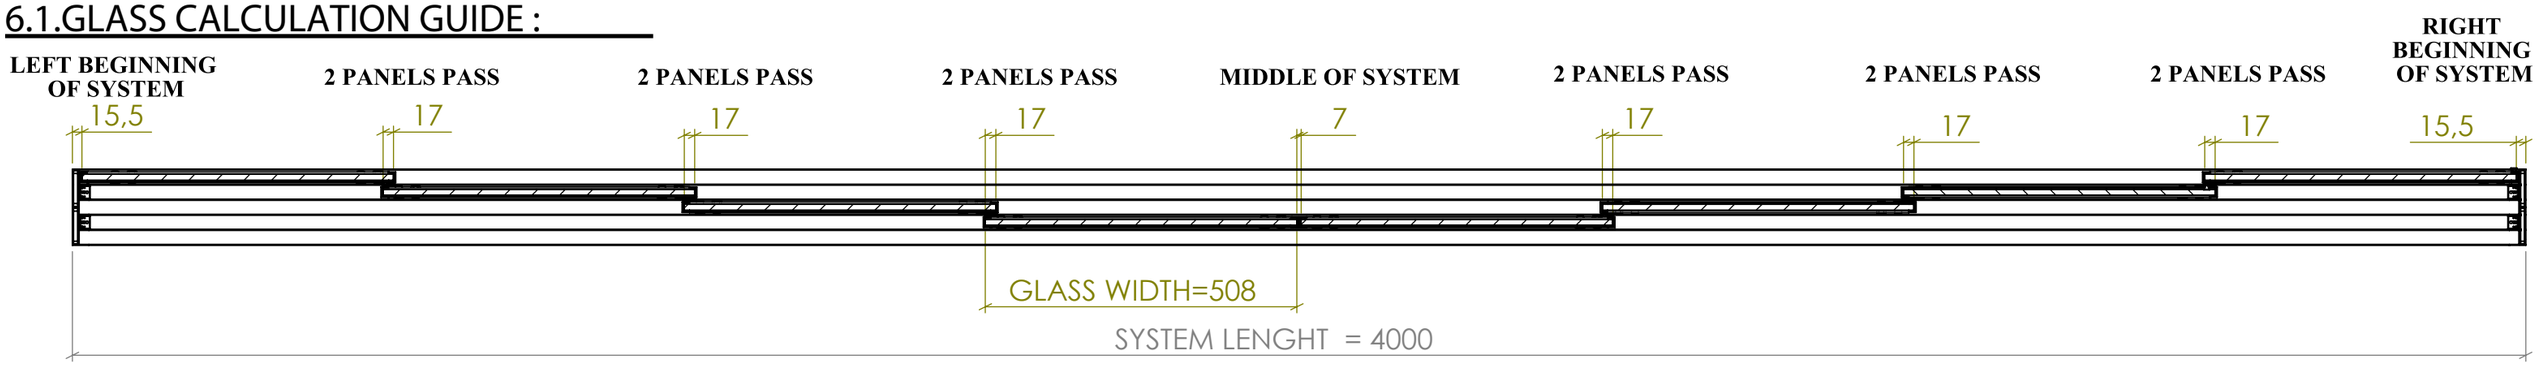

GLASS WIDTH CALCULATION TABLE	
FOR THE RIGHT AND LEFT BEGINNING OF SYSTEM	15.5 MM
FOR THE CENTER OF SYSTEM	7 MM
FOR THE PANELS PASS	17 MM

EXAMPLE OF CALCULATION:

FORMULA: GLASS WIDTH CALCULATION

SYSTEM LENGHT **4000 MM** − LEFT BEGINNING OF SYSTEM **15.5 MM** − RIGHT BEGINNING OF SYSTEM **15.5 MM** − CENTER OF SYSTEM **7 MM** + INTERSECTING **PANEL * 17 COUNT** **6 x 17 102 MM** / PANEL **NUMBER** **8** = ONE GLASS DIMENSION **508 MM**

FORMULA: GLASS HEIGHT CALCULATION

SYSTEM HEIGHT **1000 MM** − LOWER FRAME PROFILE HEIGHT **42 MM** − DISTANCE BETWEEN BOTTOM FRAME PROFILE AND LOWER GLASS SURFACE **68.5 MM** − DISTANCE BETWEEN GLASS AND BEGINNING OF UPPER BASE PROFILE **7.5 MM** − DISTANCE BETWEEN BEGINNING OF UPPER BASE PROFILE AND BEGINNING OF UPPER FRAME PROFILE **34 MM** = GLASS HEIGHT **848 MM**

SYSTEM HEIGHT **1000 MM**

− **152 MM**

= GLASS HEIGHT **848 MM**

GLASS DIMENSION →

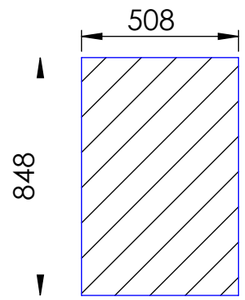

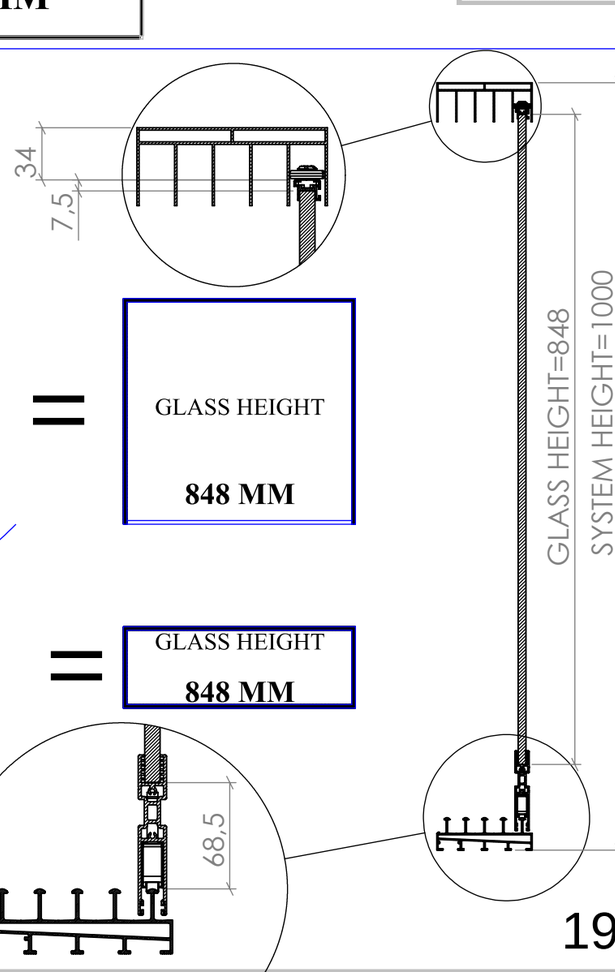

www.asafalu.com.tr

Asaf Alüminyum

6.2.BASE PROFILE CALCULATION METHOD

6.2.1. UPPER BASE PROFILE CALCULATION

FORMULA: UPPER BASE PROFILE LENGTH CALCULATION

GLASS WIDTH	−	INNER SPACE OF THE BAR **CONJOINING** CAP	−	INNER SPACE OF THE BAR **CONJOINING** CAP	=	UPPER BASE PROFILE LENGTH
508 MM		**8,5 MM**		**8,5 MM**		**491 MM**

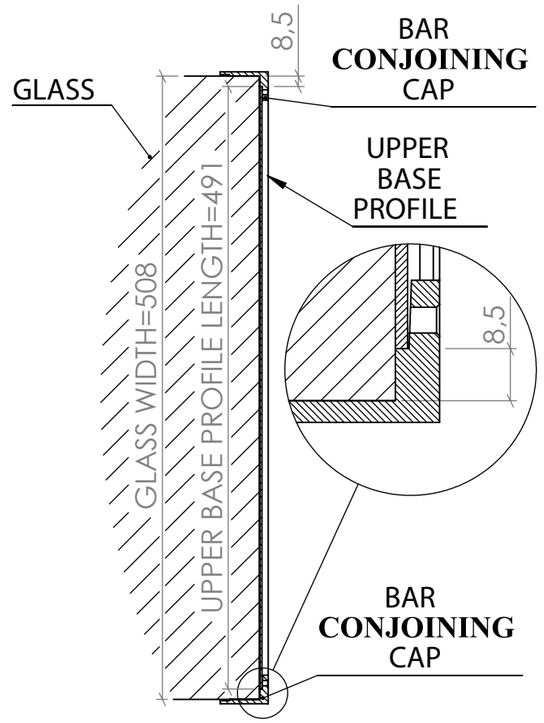

6.2.2.LOWER BASE PROFILE CALCULATION

1.FOR THE INITIAL AND MIDDLE PANELS;

FORMULA: LOWER BASE PROFILE LENGTH CALCULATION

GLASS WIDTH	−	INNER SPACE OF THE MIDDLE AND SIDE COLUMN CAPS	−	INNER SPACE OF THE INTERMEDIATE BASE CAPS	=	LOWER BASE PROFILE LENGHT
508 MM		**8,5 MM**		**2,5 MM**		**497 MM**

2.FOR THE INTERMEDIATE PANELS;

FORMULA: LOWER BASE PROFILE LENGTH CALCULATION

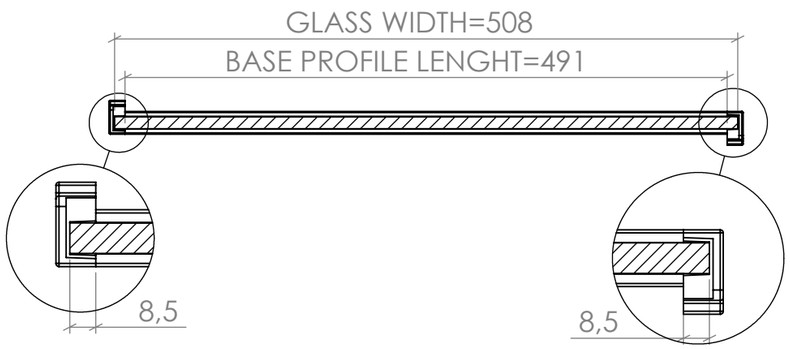

GLASS WIDTH	−	INNER SPACE OF THE INTERMEDIATE BASE CAPS	−	INNER SPACE OF THE INTERMEDIATE BASE CAPS	=	LOWER BASE PROFILE LENGHT
508 MM		**8,5 MM**		**8,5 MM**		**491 MM**

6.3. GLASS SEAL CALCULATION GUIDE

6.3.1. LENGTH CALCULATION OF INITIAL GLASS SEAL

FORMULA: INITIAL ALUM. SEAL LENGTH CALCULATION

GLASS HEIGHT	−	GLASS GAP DIMENTION INTO BASE PROFILE	−	GLASS GAP DIMENTION INTO BAR CONJOINING CAP	=	INITIAL ALUM. SEAL LENGTH
848 MM		18 MM		24.5 MM		805.5 MM

INITIAL ALUMINUM GLASS SEAL

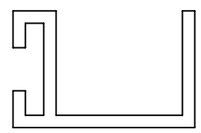

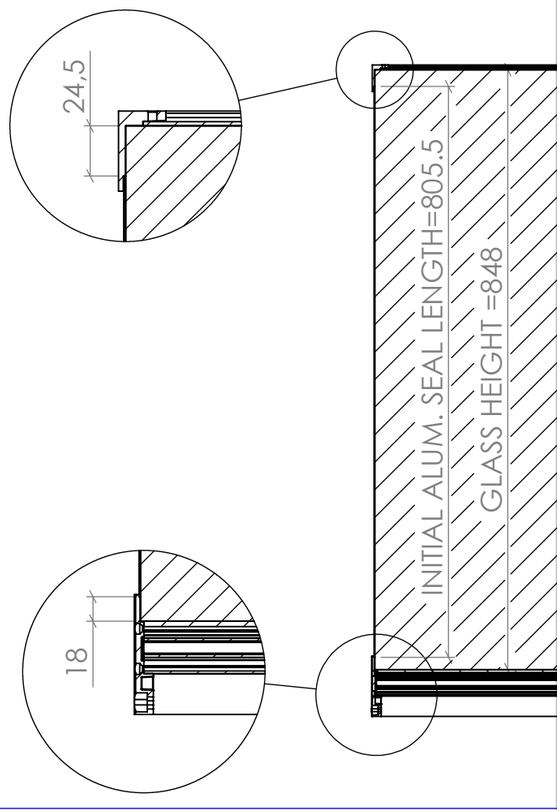

6.3.2. LENGTH CALCULATION OF GLASS SEAL

FORMULA: ALUM. SEAL LENGTH CALCULATION

GLASS HEIGHT	−	BASE INTERMEDIATE CAPS GAP DIMENTION	−	GLASS GAP DIMENTION INTO BAR CONJOINING CAP	=	MIDDLE ALUM. SEAL LENGTH
848 MM		15.5 MM		24.5 MM		808 MM

ALUMINUM GLASS SEAL

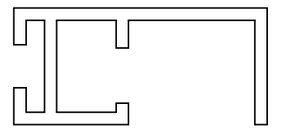

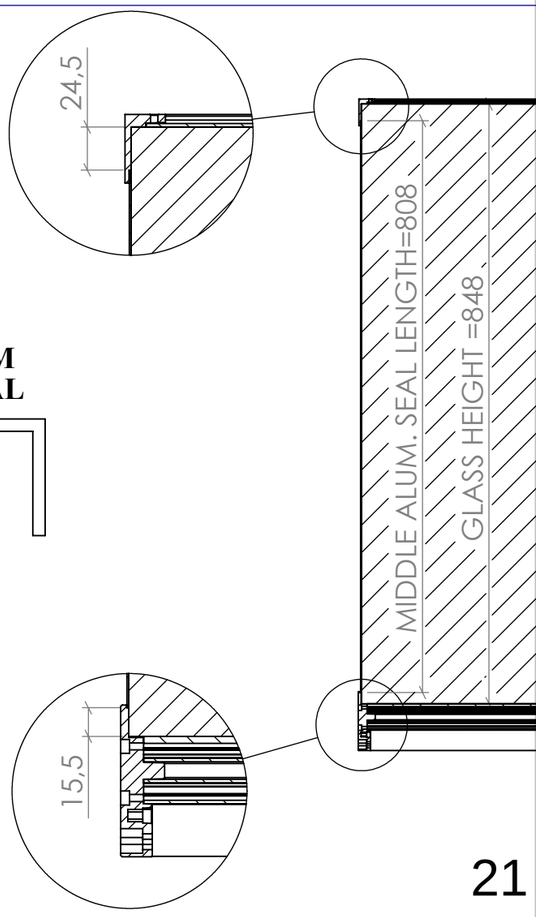

6.4. SIDE COLUMN PROFILE CALCULATION METHOD

FORMULA: **SIDE COLUMN CALCULATION**

SYSTEM HEIGHT	−	BOTTOM SIDE COLUMN EQUIPMENT HEIGHT	−	UPPER BASE PROFILE HEIGHT	=	SIDE COLUMN PROFILE LENGHT
1000 MM		22 MM		51 MM		928 MM

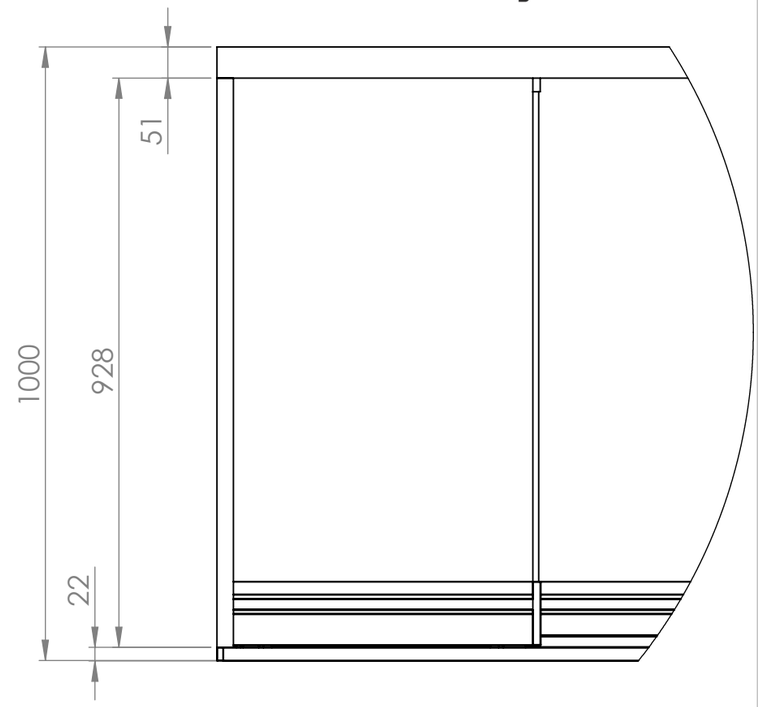

6.5. LENGTH CALCULATION OF H TRANPARENT SEAL

- H SEAL IS UTİLİZED AT EDGES OF 2 MIDDLE PANELS. H SEAL LENGTH IS THE SAME AS FOR AN INITIAL ALUMINUM SEAL.

H-SEAL



6.6. FRAME PROFILE CALCULATION GUIDE

- AS MENTIONED IN PART «TAKING MEASURES», FRAME PROFILE MUST BE CUT AS SYSTEM LENGTH.

SYSTEM LENGHT	−	BOTTOM SIDE COLUMN EQUIPMENT WIDTH	−	BOTTOM SIDE COLUMN EQUIPMENT WIDTH	=	LOWER FRAME PROFILE HEIGHT
4000 MM		10 MM		10 MM		3980 MM

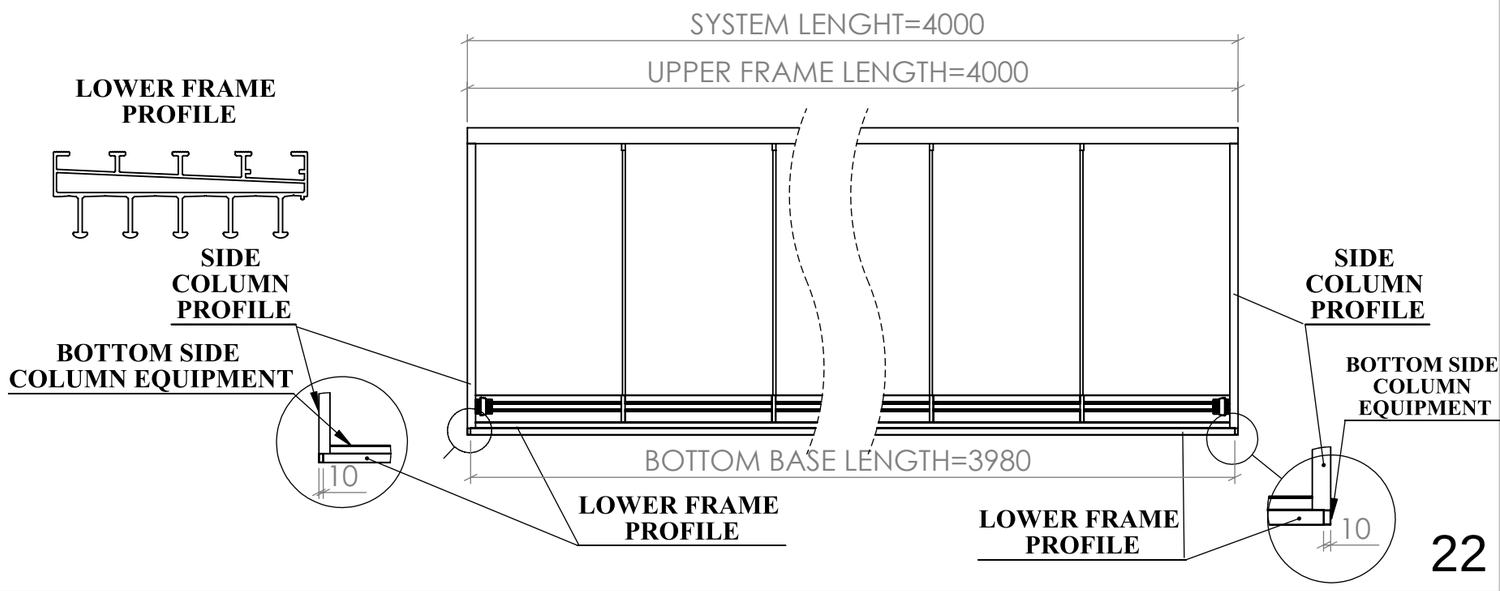

7. PRODUCTION AND ASSEMBLY STEPS OF ASF SLIDING SYSTEM WITH THRESHOLD

- PRODUCTION STEPS FOR SLIDING SYSTEMS WITH/WITHOUT THRESHOLD ARE SAME. FOR SYSTEM WITH THREHOLD ONLY FOLLOWING ITEMS ARE DIFFERENT: INITIAL AND SIDE COLUMN CAPS, INTERMEDIATE CAPS, LOWER BASE PROFILE AND BOTTOM WHEELS. THEIR APPLICATION IS THE SAME AS IN A SYSTEM WITHOUT THRESHOLD.
- INSTALLATİON STEPS ARE SAME FOR SLİDİNG SYSTEMS WİTH THRESHOLD AND WİTHOUT THRESHOLD.

8. SPECIFIC STAFF OF ASF SLIDING SYSTEM WITH THRESHOLD

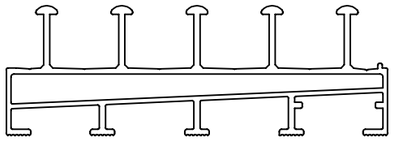

W.6900
ASF BOTTOM FRAME PROFILE
OF SLIDE SYS. WITH THRESHOLD



W.6903
ASF BOTTOM BASE PROFILE OF
SLIDE SYS. WITH THRESHOLD

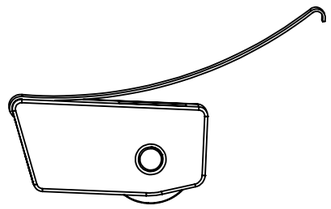

W.6920
ASF BOTTOM WHEELS OF SLIDE
SYS. WITH THRESHOLD

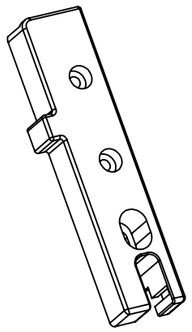

W.6923
ASF INTERMEDIATE CAP OF
SLIDE SYS. WITH THRESHOLD

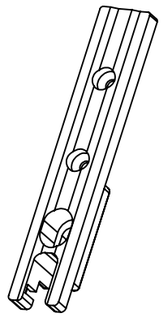

W.6924
ASF INITIAL AND SIDE COLUMN CAP
OF SLIDE SYS. WITH THRESHOLD

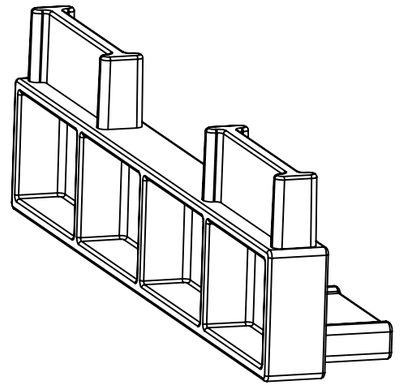

W.6925
ASF BOTTOM SIDE COLUMN EQUIPMENT
OF SLIDE SYS. WITH THRESHOLD

8.1. NEEDED PARTS FOR INITIAL PANEL

♦ NEEDED PARTS OF MIDDLE AND INITIAL PANELS ARE SAME, EXCEPT AN INITIAL SEAL. INSTEAD OF INITIAL SEAL AT THE MIDDLE PANEL H-SEAL IS USED.

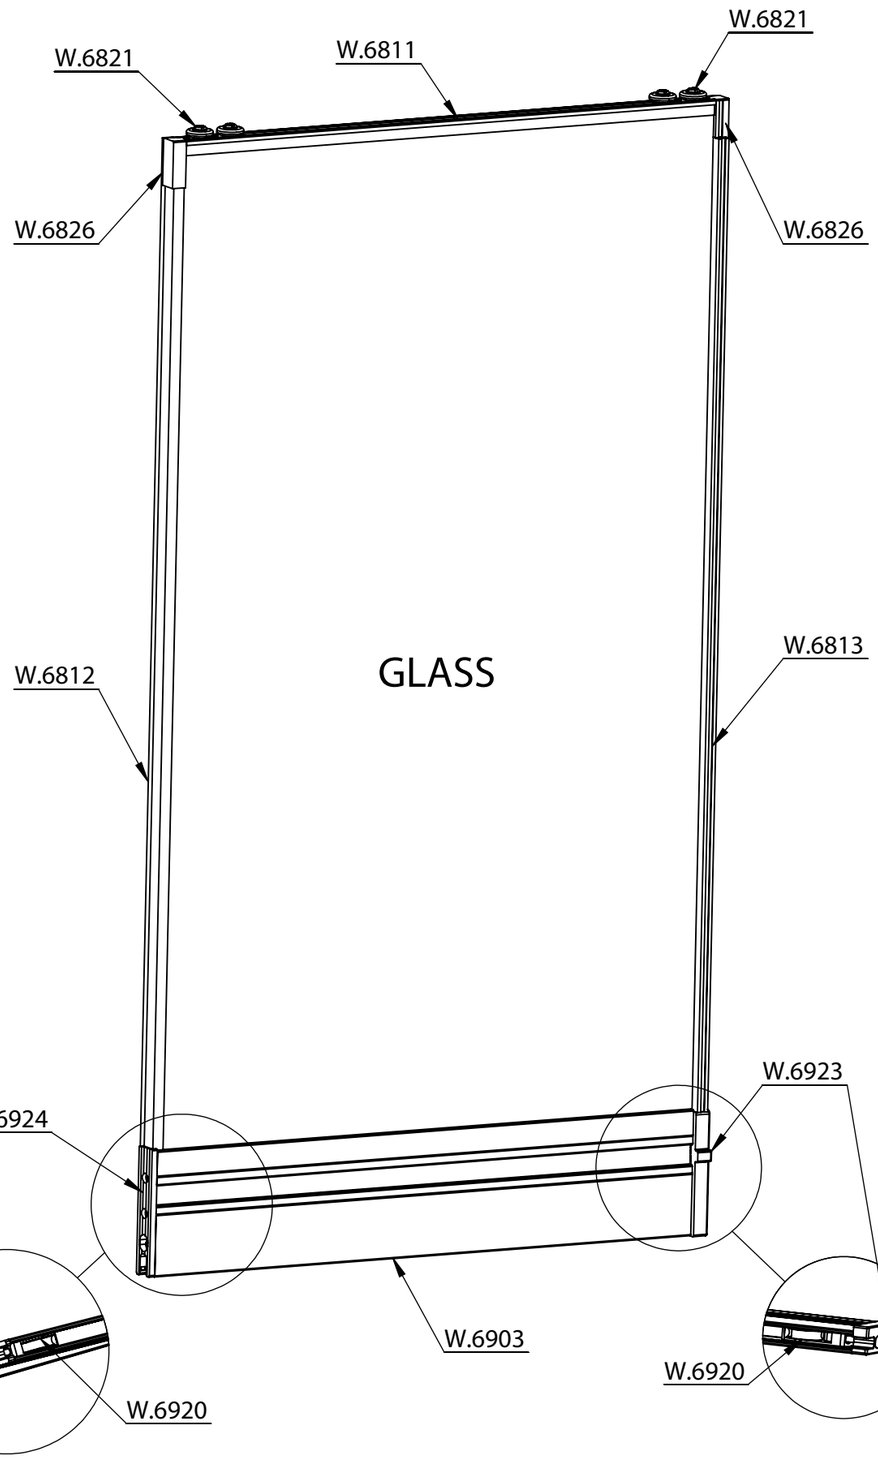

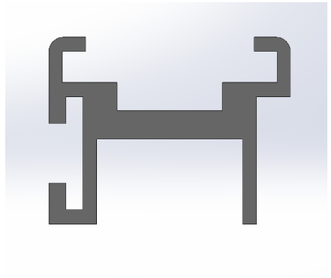

W.6811
UPPER BASE PROFILE

ONLY ONE PIECE IS USED AT EACH GLASS PANEL FROM SYSTEM TOP.

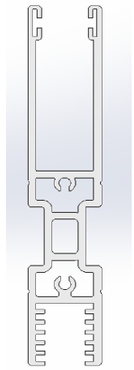

W.6903
BOTTOM BASE WITH THRESHOLD

ONLY ONE PIECE IS USED AT EACH GLASS PANEL FROM SYSTEM BOTTOM

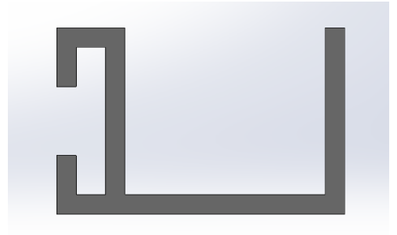

W.6813
INITIAL ALUMINUM SEAL

ITS USED ON THE OUTER EDGES OF INITIAL PANELS AS INSULATION.

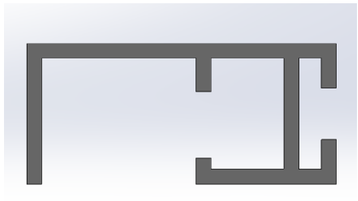

W.6812
INTERMEDIATE ALUMINUM SEAL

ITS USED BETWEEN GLASS PANLES AS INSULATION

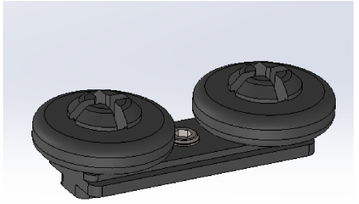

W.6821
UPPER WHEEL

IT'S MOUNTED ON THE EACH EDGE OF THE UPPER GLASS PROFILE, ENSURING BALANCE OF THE SYSTEM.

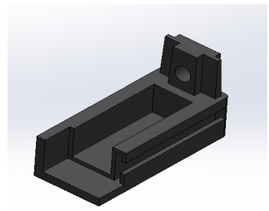

W.6826
BAR CONJOINING CAP

IT'S MOUNTED ON THE EACH TOP EDGE OF THE GLASS PANEL.

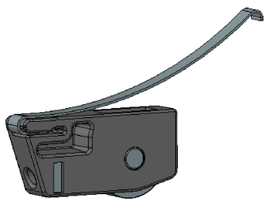

W.6920
BOTTOM WHEELS WITH THRESHOLD

IT'S MOUNTED ON THE EACH EDGE OF THE LOWER GLASS PROFILE, PROVIDING MOTION OF THE PANELS.

W.6824
MIDDLE AND INITIAL CAPS

IT'S INSTALLED ON THE LOWER BASE PROFILE AT THE END OR MIDDLE POINTS.

W.6823
INTERMEDIATE BASE CAPS

IT'S MOUNTED ON THE LOWER BASE PROFIL IN ORDER TO DRAG THE PANELS.

8.2. NEEDED PARTS FOR INTERMEDIATE PANEL

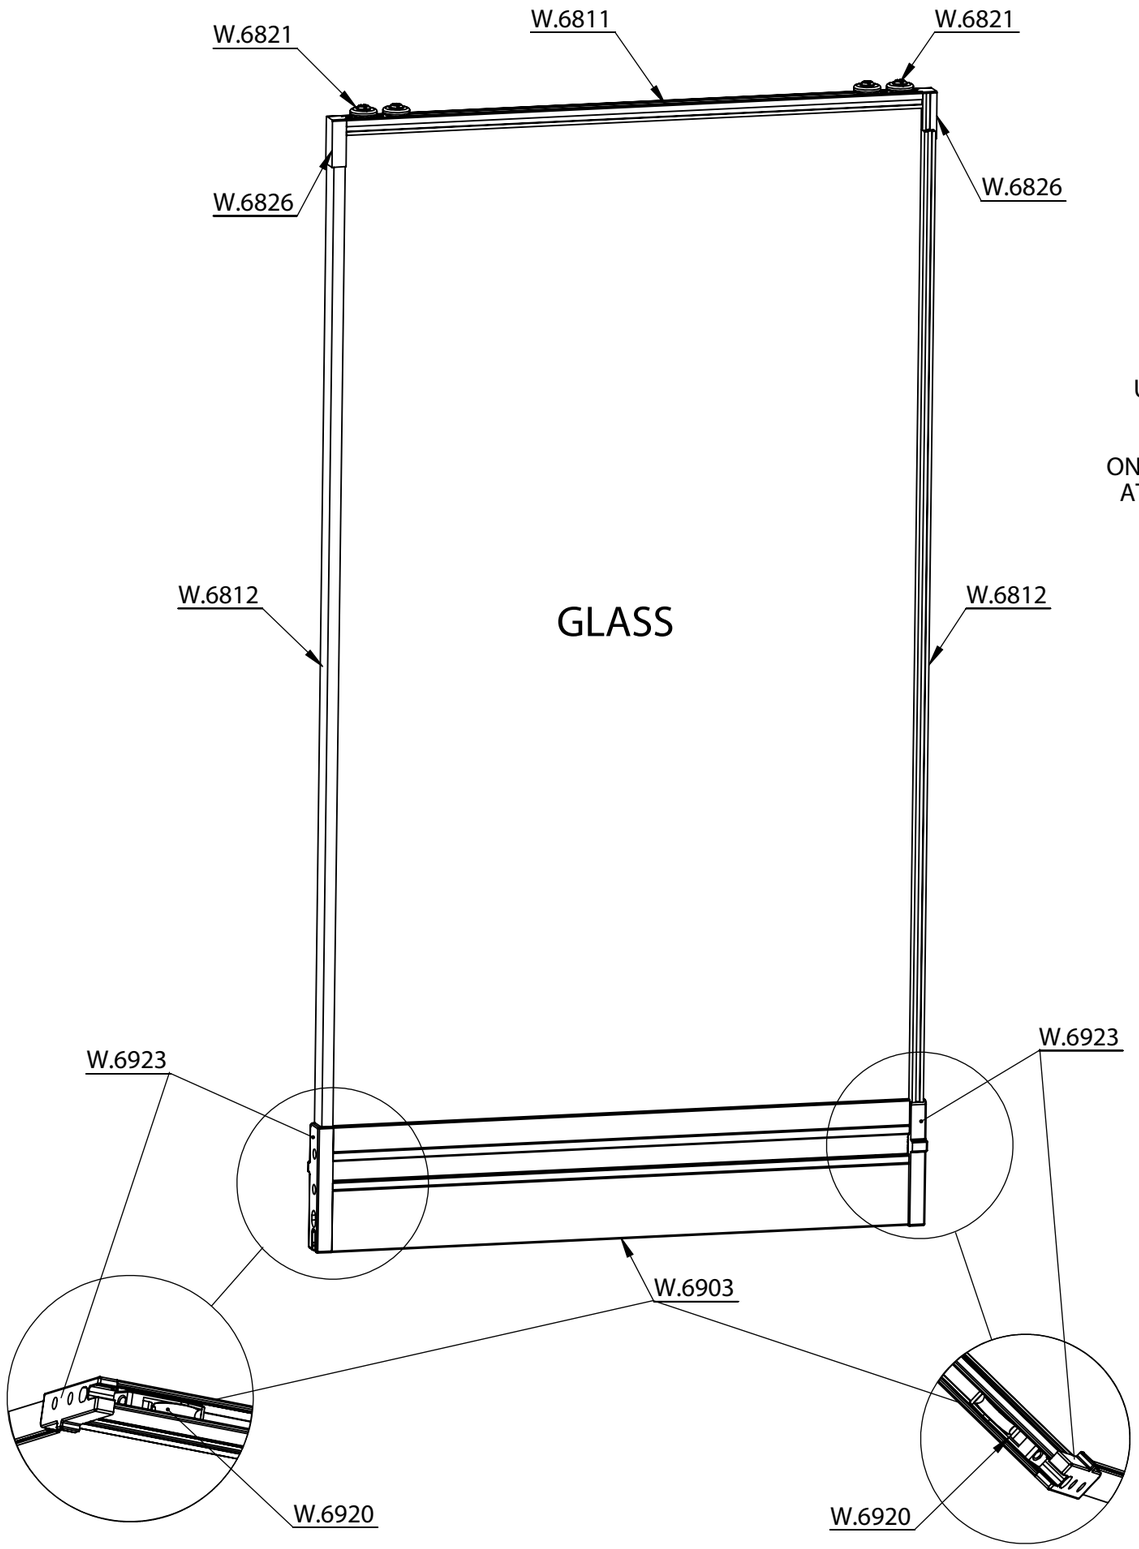

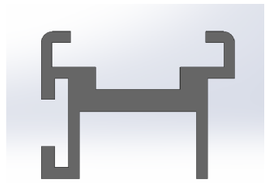

W.6811
UPPER BASE PROFILE

ONLY ONE PIECE IS USED AT EACH GLASS PANEL FROM SYSTEM TOP.

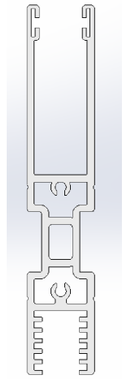

W.6903
BOTTOM BASE WITH THRESHOLD

ONLY ONE PIECE IS USED AT EACH GLASS PANEL FROM SYSTEM BOTTOM

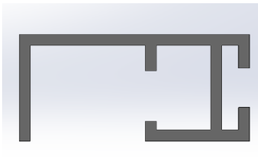

W.6812
INTERMEDIATE ALUMINUM SEAL

ITS USED BETWEEN GLASS PANLES AS INSULATION

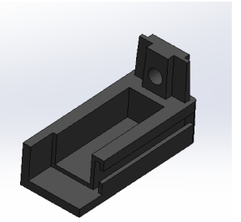

W.6826
BAR CONJOINING CAP

IT'S MOUNTED ON THE EACH TOP EDGE OF THE GLASS PANEL.

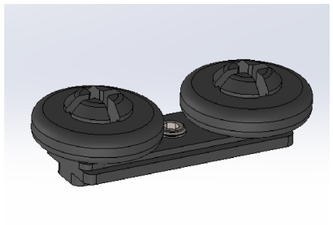

W.6821
UPPER WHEEL

IT'S MOUNTED ON THE EACH EDGE OF THE UPPER GLASS PROFILE, ENSURING BALANCE OF THE SYSTEM.

W.6823
INTERMEDIATE BASE CAPS

IT'S MOUNTED ON THE LOWER BASE PROFIL IN ORDER TO DRAG THE PANELS.

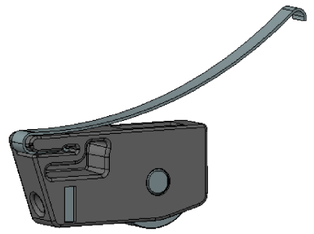

W.6920
BOTTOM WHEELS WITH THRESHOLD

IT'S MOUNTED ON THE EACH EDGE OF THE LOWER GLASS PROFILE, PROVIDING MOTION OF THE PANELS.
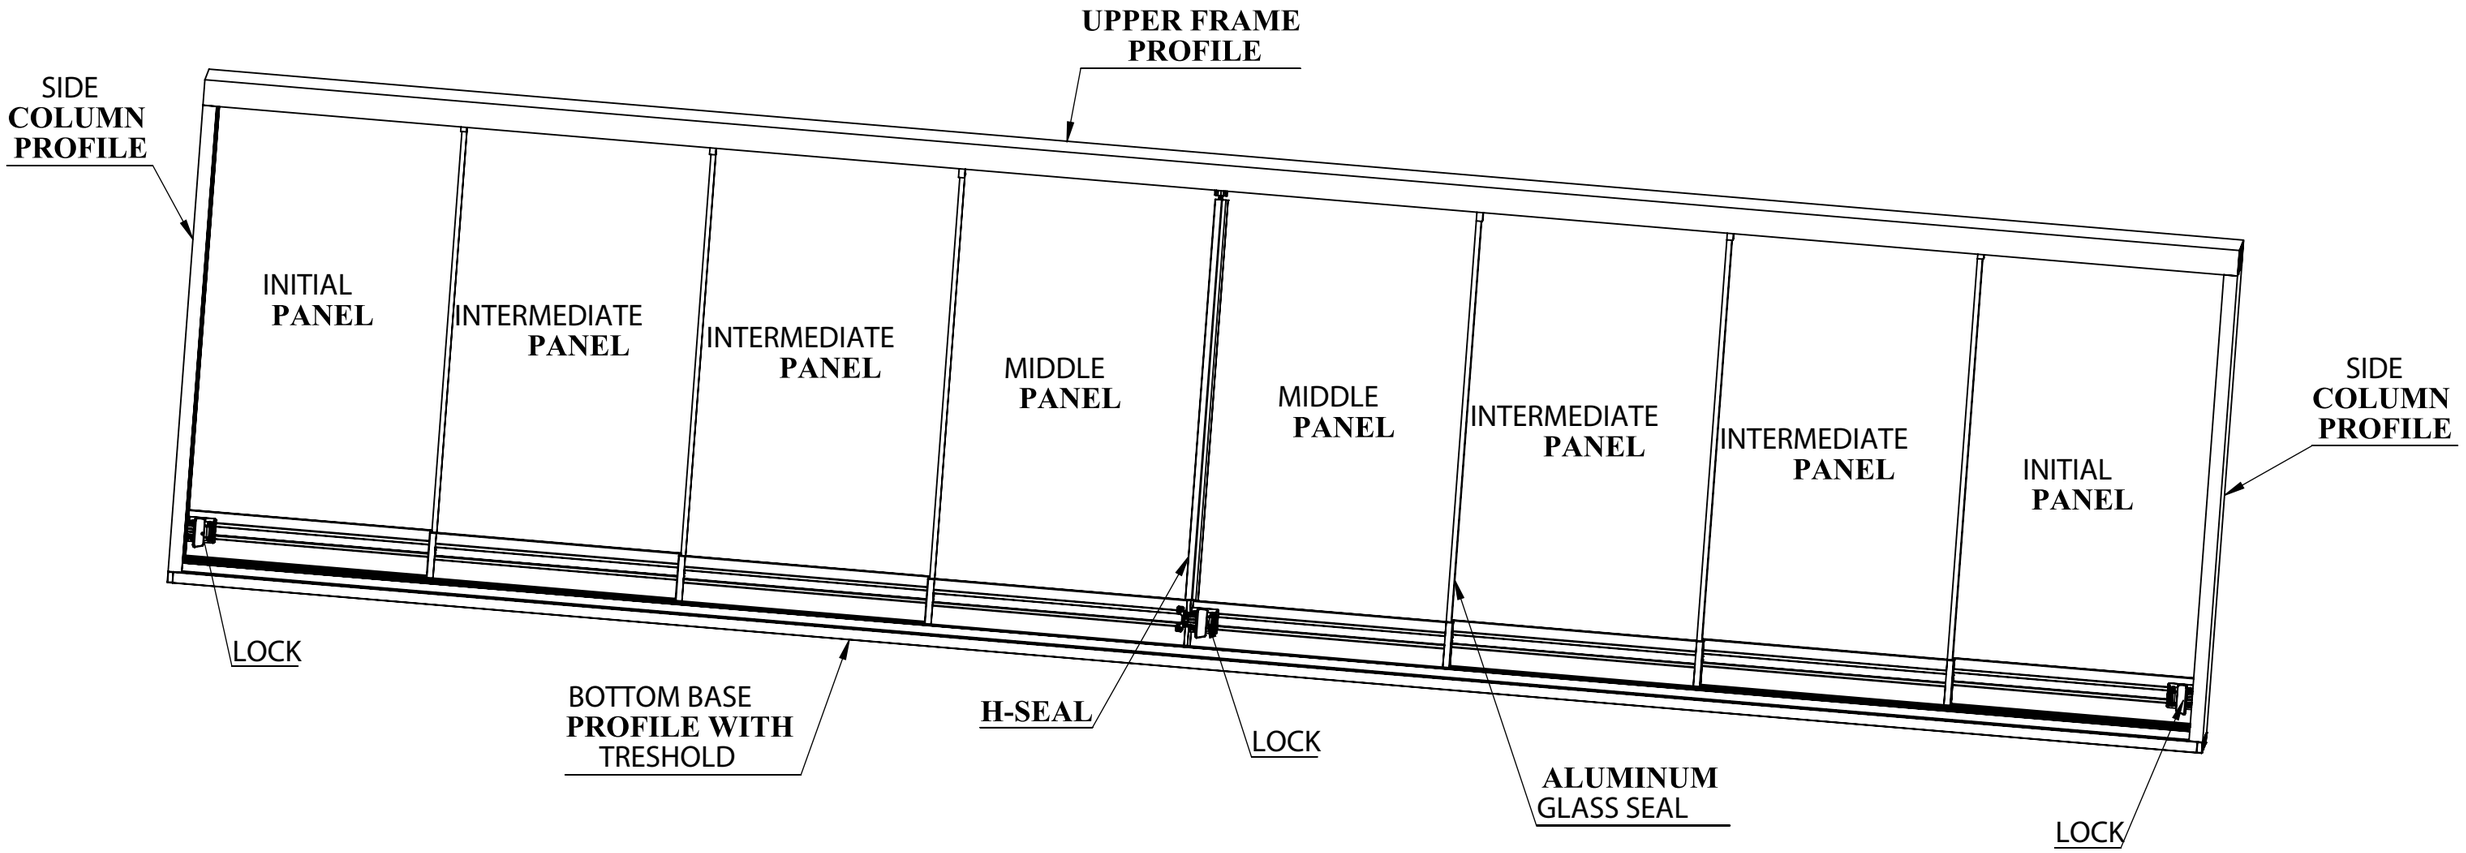
9. INSTALLATED ASF SLIDING SYSTEM WITH THRESHOLD